
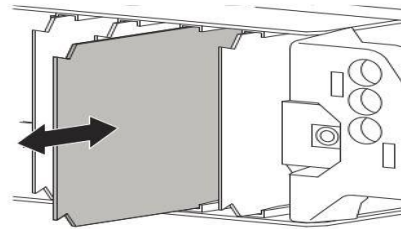


 PT. MNA SERANG	WORKING INSTRUCTION	WI/MNASRG-E&I-19-117	
		Dept.	ENGINEERING
	SYSTEM HUB MODEM CARD REPLACEMENT	Section	E&I
		Revision	0
		Effective Date	01-Sep-19
		Page	1 of 2

Identifikasi / Identification

Periksa LED Tx dan Rx pada Field Bus Modem apakah berkedip hijau. (*Check there's the Tx and Rx LED Field Bus Modem blinking green*)

Penggantian Modem Card / Modem Card Replacement

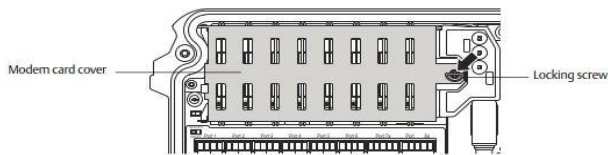


Longgarkan sekrup pengunci dan buka tutup blok System Hub (*Loosen the locking screws and open the lid on the 2460 Housing*)

Putar sekrup pengunci 90 derajat & buka cover modem card. Tarik modem card keluar. (*Turn the locking screw 90 degrees & open the modem card cover. Pull the modem card out.*)

Masukan modem card baru. Dorong modem card ke kontak Main board. (*Insert the new card into card holder. Push the modem card in to the Main board contact*)

Tutup cover modem. Putar sekrup pengunci (*Close the modem cover. Turn the locking screw*)

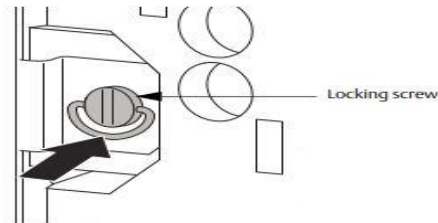

Pastikan ring pada sekrup pengunci terlipat ke bawah. Pastikan tutup System hub tertutup dengan baik. (*Ensure the ring on the Locking screw is folded*)