

 PT. MNA SERANG	WORKING INSTRUCTION DELTA V DCS NETWORK CHECKING	WI/MNASRG-E&I-19-211	
		Dept.	ENGINEERING
		Section	E&I
		Revision	0
		Effective Date	01-Sep-19
		Page	1 of 1




Periksa Indikator LED pada Media Converter, Hijau: Ok (*Check the LED Indicator on Media Converter. Green: OK*)




Periksa Indikator LED pada HMI, Hijau: Ok (*Check the LED Indicator on HMI Screeng. Green: OK*)




Klik menu "Diagnostic" pada layar (*Click the "Diagnostic" menu on the HMI screen*)

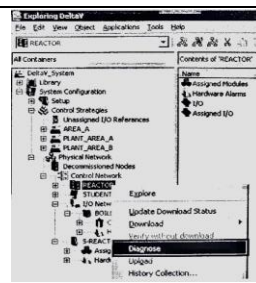

Klik kanan pada modul network, dan pilih "diagnose" (*Right Click on the Network Modul, and choose "diagnose"*)

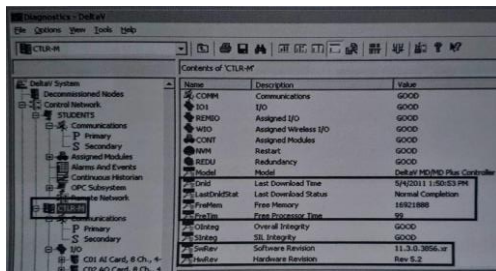

klik 2 kali pada Controller, Pastikan Download Status: "Normal Completeion" (*Double Click on the controller, make sure that the Download Status: "normal Completion"*)

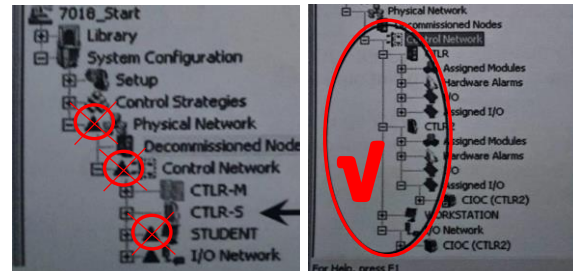

Pastikan tidak ada indikasi warning terlihat (*Make sure no warning sign seen*)