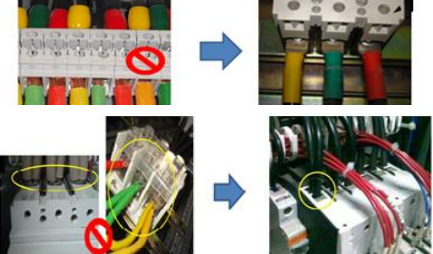
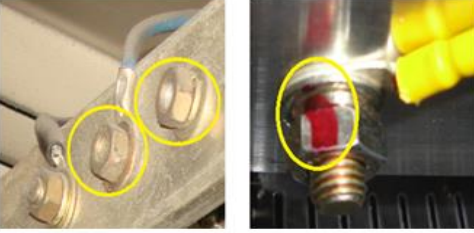


 PT. MNA SERANG	WORKING INSTRUCTION	WI/MNA-E&I-19-216	
		Dept.	ENGINEERING
	MARSAHLLING DCS PANEL CLEANING AND INSPECTION PREVENTIVE MAINTENANCE	Section	E&I
		Revision	0
		Effective Date	
		Page	1 of 3

Instruksi / <i>Instruction</i>	
Persiapan Maintenance / <i>Prepare of Maintenance</i>	
	
Siapkan peralatan dan APD (<i>Prepare equipment and APD</i>)	Lakukan prosedur LOTO (<i>do LOTO Procedurs</i>)
Maintenance Action	
 	
Bersihkan panel dan komponen dalam panel (<i>Cleaning panel and component inside panel</i>)	Rapikan kabel yang ada di dalam panel (<i>tidy the cable inside panel</i>)
	
Periksa seluruh bagian panel apakah terdapat kecacatan pada panel (<i>Checking all of part panel when any damage in the panel</i>)	Pastikan base plate, ventilasi, PE, kunci dan penyangga pintu terpasang dengan baik (<i>make sure base plate, ventilation, PE, keys and door holder already installed</i>)
	
Pastikan terminasi kabel sudah sempurna dan jumlah terminasi sesuai dengan jumlah kabel (<i>make sure cable termination already terminated and perfectly</i>)	Pastikan kekencangan setiap baut baut dan terminasi (<i>Pmake sure bolt and termination tightened</i>)