

DRAWING INDEX & REVISION

DRAWING NO.	DRAWING TITLE	DATE	REV.	DATE	REV.	DATE	REV.	DATE	REV.	DATE	REV.
3258585-PSS-PASH-DWG-00001	COVER SHEET	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	DRAWING INDEX & REVISION	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG – (FRONT DOOR VIEW, RIGHT SIDE, LEFT SIDE VIEW & BOTTOM VIEW)	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG – (FRONT VIEW, SECTION A–A & SECTION B–B)	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG – BILL OF MATERIAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG – 240VAC POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG – 24VDC POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL I/O WIRING DIAGRAM – AI NIS SIGNAL, AO NIS SIGNAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL – (FRONT DOOR VIEW, RIGHT SIDE, LEFT SIDE VIEW & BOTTOM VIEW)	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL – (FRONT VIEW, SECTION A–A & SECTION B–B)	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL – BILL OF MATERIAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL – 240VAC POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL – 24VDC POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL I/O WIRING DIAGRAM – DI NIS SIGNAL, DO NIS SIGNAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL I/O WIRING DIAGRAM – DI NIS SIGNAL, DO NIS SIGNAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG ZONE 2 – (FRONT DOOR VIEW, RIGHT SIDE & LEFT SIDE VIEW)	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG ZONE 2 – (FRONT VIEW, SECTION A–A, SECTION B–B & BOTTOM VIEW)	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG ZONE 2 – BILL OF MATERIAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG ZONE 2 – 240VAC UPS POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET ANALOG ZONE 2 – 24VDC POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL I/O WIRING DIAGRAM – AI IS SIGNAL, AO IS SIGNAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL ZONE 2 – (FRONT DOOR VIEW, RIGHT SIDE & LEFT SIDE VIEW)	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL ZONE 2 – (FRONT VIEW, SECTION A–A, SECTION B–B & BOTTOM VIEW)	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL ZONE 2 – BILL OF MATERIAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL ZONE 2 – 240VAC UPS POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO CABINET DIGITAL ZONE 2 – 24VDC POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL I/O WIRING DIAGRAM – DI IS SIGNAL, DO IS SIGNAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO FOR MCC – (FRONT VIEW)	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO FOR MCC – BILL OF MATERIAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO FOR MCC – 240VAC POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL RIO FOR MCC – 24VDC POWER DISTRIBUTION DIAGRAM	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		
3258585-PSS-PASH-DWG-00001	TYPICAL I/O WIRING DIAGRAM – AI NIS SIGNAL, DI NIS SIGNAL, DO NIS SIGNAL	28/06/18	A	26/07/18	B	22/11/18	C	29/08/19	0		



PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(s)



EMERSON PROJECT NO.: 3258585
PROJECT TITLE: DCS SERANG PROJECT

SCALE: NTS
SIZE: A3
UNITS: mm (inch) 2018


TITLE: DRAWING INDEX & REVISION

EMERSON DRAWING NO.: 3258585-PSS-PASH-DWG-00001
CUSTOMER DRAWING NO.: -


SHEET NO: 002

REV: 0


THIS DRAWING IS THE PROPERTY OF EMERSON PROCESS MANAGEMENT. INFORMATION AND KNOW HOW HEREIN ARE CONFIDENTIAL AND MAY NOT BE USED, REPRODUCED OR REVEALED TO OTHERS EXCEPT IN ACCORDANCE WITH CONTRACT OR OTHER WRITTEN CONSENT OF EMERSON PROCESS MANAGEMENT. ANY PERMITTED REPRODUCTION IN WHOLE OR IN PART, INCLUDING SHOP DRAWINGS MUST BEAR OR REFER TO THIS LEGEND.

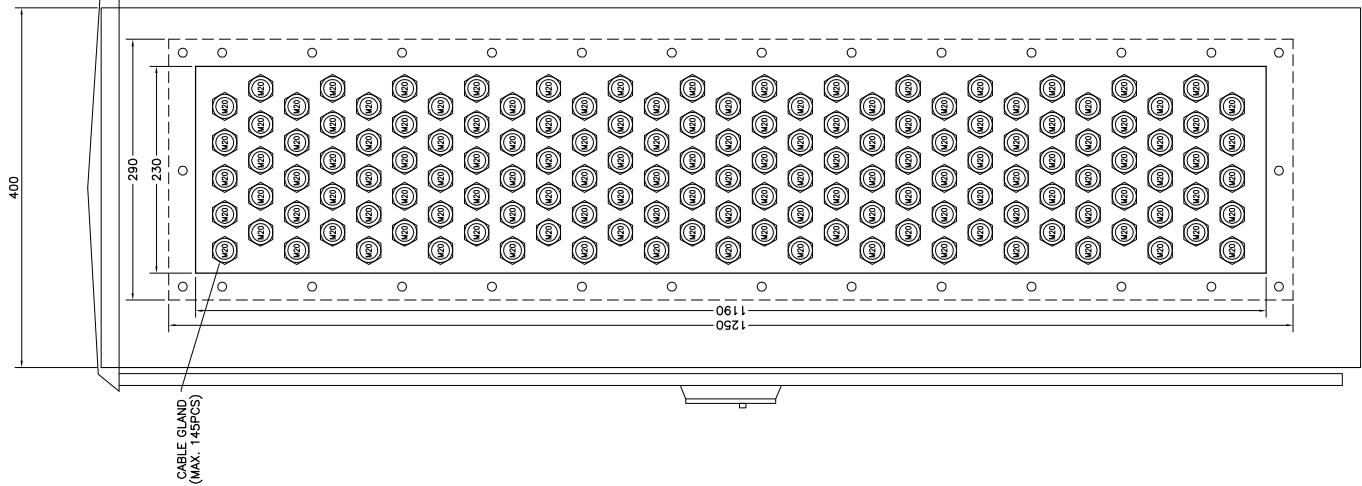

LEFT SIDE VIEW
RIO CABINET – XXXX

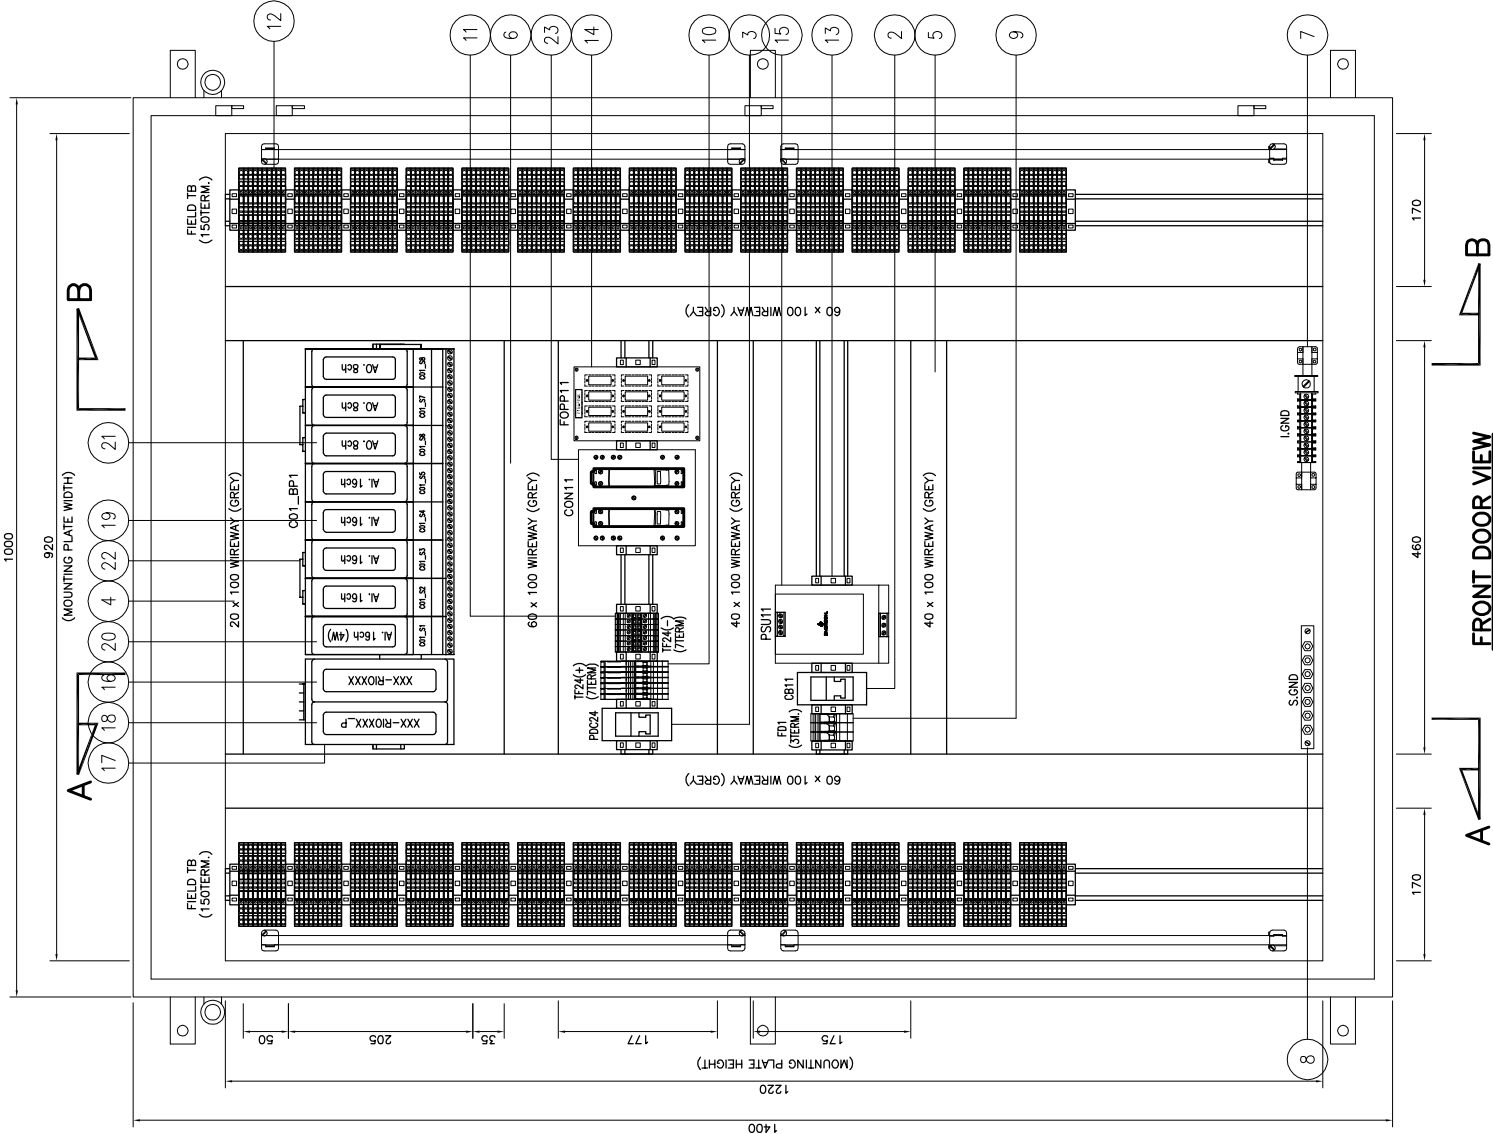

FRONT DOOR VIEW
RIO CABINET – XXXX

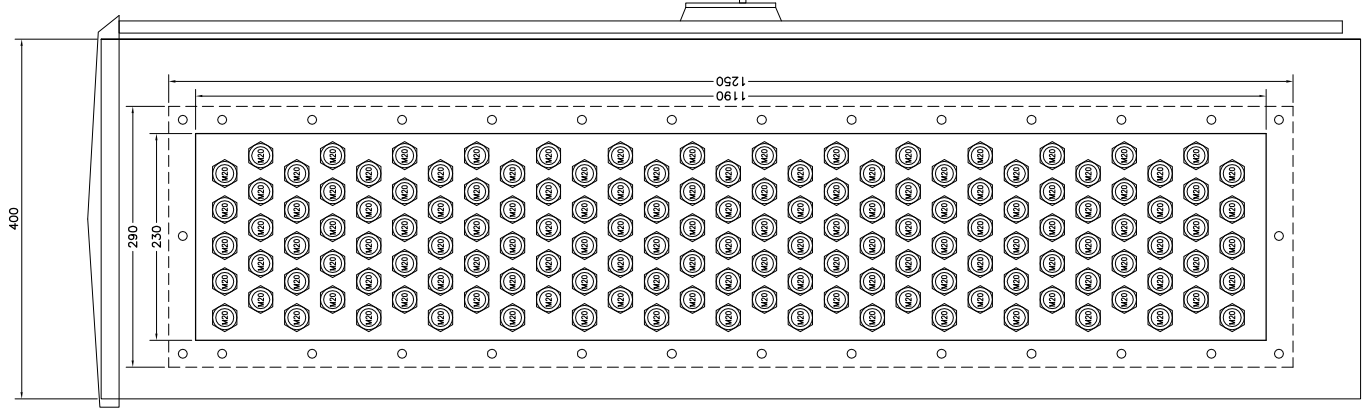

RIGHT SIDE VIEW
RIO CABINET – XXXX



SCALE:	NTS	SIZE:	A3
UNITS:	mm (inch)		2018

EMERSON PROJECT NO.:	3258585
PROJECT TITLE:	DCS SERANG PROJECT

TITLE:	TYPICAL RIO CABINET ANALOG (FRONT VIEW, SECTION A-A & SECTION B-B)
--------	--

EMERSON DRAWING NO.:	3258585-PSS-PASH-DWG-00001
CUSTOMER DRAWING NO.:	-

SHEET NO.:	004
REV.:	0

BILL OF MATERIALS

ITEM NO.	DESCRIPTION		PART NUMBER	QTY.	MANUFACTURER
01	RIO CABINET (W1000 X H1400 X D400) FRONT ACCESS		NKD-3262869-02	1 SET	GRP INDUSTRIES
02	AC MCB 2POLE (10A)		IK60N C10A	1 PC	SCHNEIDER
03	DC MCB 2POLE (20A)		C60H-DC C20A	1 PC	SCHNEIDER
04	20 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
05	40 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
06	60 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
07	INSTRUMENT GROUND BAR		-	1 LOT	CONTRACTOR
08	SAFETY GROUND BAR		-	1 LOT	CONTRACTOR
09	2-COND THROUGH TERMINAL BLOCK, 10MM SQ		2010-1201	3 PCS	WAGO
10	FUSE DISCONNECT TB WITH FUSE BLOW INDICATOR, 24VDC, 4MM SQ		2004-1611/1000-0541	7 PCS	WAGO
11	2-COND THROUGH TERMINAL BLOCK, 4MM SQ		2004-1201	7 PCS	WAGO
12	DOUBLE DECK DISCONNECT TERMINAL BLOCK, 2.5MM SQ		2002-2671	300 PCS	WAGO
13	END STOPPER		249-117	1 LOT	WAGO
14	FIBER OPTIC PATCH PANEL (BY OTHERS)		TBA	1 PC	TBA
15	DELTAV BULK POWER SUPPLY 100-240 V AC TO 24 V DC, 20A		VE5126	1 PC	EMERSON PROCESS
16	REMOTE INTERFACE UNIT FOR ZONE 2 REMOTE I/O		VE4021	1 PC	EMERSON PROCESS
17	2-WIDE POWER/CONTROLLER CARRIER		VE3051C0	1 PC	EMERSON PROCESS
18	ENHANCED SYSTEM POWER SUPPLY; (DUAL DC/DC) INPUT		VE5009	1 PC	EMERSON PROCESS
19	ANALOG INPUT CARD; 16 CHANNELS; 4-20 MA; HART; I/O TERMINATION BLOCK		VE4003S2B6	4 PCS	EMERSON PROCESS
20	ANALOG INPUT CARD; 16 CHANNELS; 4-20 MA; HART; 4-WIRE; I/O TERMINATION BLOCK		VE4003S2B7	1 PC	EMERSON PROCESS
21	ANALOG OUTPUT, 8 CHANNELS 4-20 MA, HART, STANDARD I/O TERMINATION BLOCK		VE4005S2B1	3 PCS	EMERSON PROCESS
22	8-WIDE I/O INTERFACE CARRIER WITH CARRIER SHIELD BAR		VE3051C0	1 PC	EMERSON PROCESS
23	DUAL SINGLE MODE MEDIA CONVERTER ASSEMBLY		VE6060	1 PC	EMERSON PROCESS
24	AK4 - CABLE SCREEN CONNECTOR		0404017	60PCS	PHOENIX CONTACT
25					
26					
27					
28					



PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(s)



EMERSON PROJECT NO.: 3258585
PROJECT TITLE:
DCS SERANG PROJECT

SCALE: NTS
UNITS: mm (inch)


SIZE: A3
2018

TITLE:
TYPICAL RIO CABINET ANALOG
BILL OF MATERIAL


EMERSON DRAWING NO.: 3258585-PSS-PASH-DWG-00001
CUSTOMER DRAWING NO.: -

SHEET NO: 005
REV: 0


AI-4WIRE NIS SIGNAL

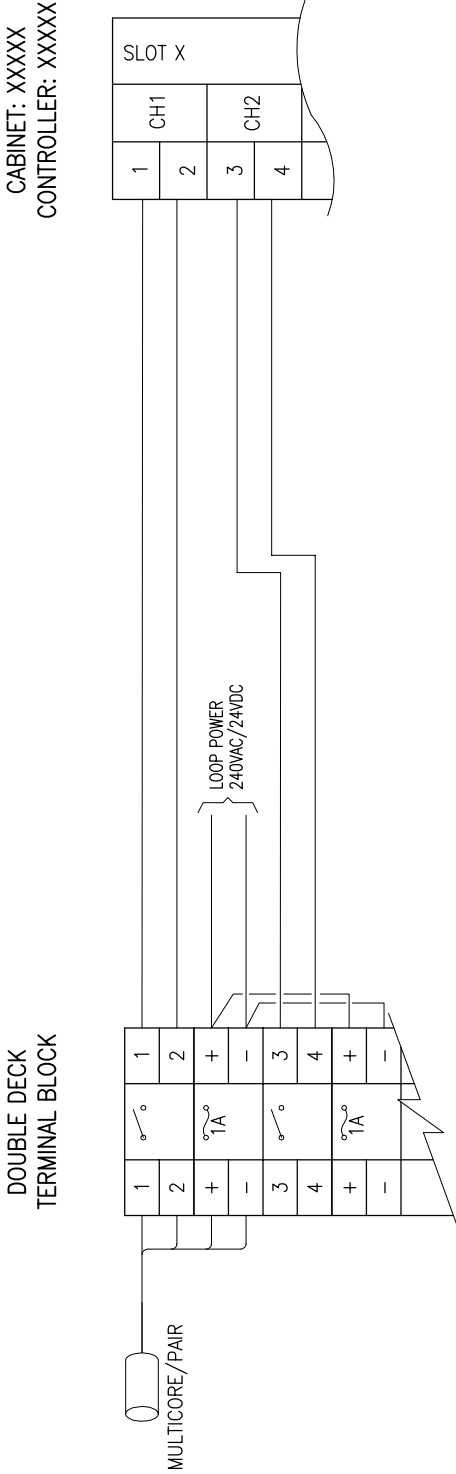

AI NIS SIGNAL

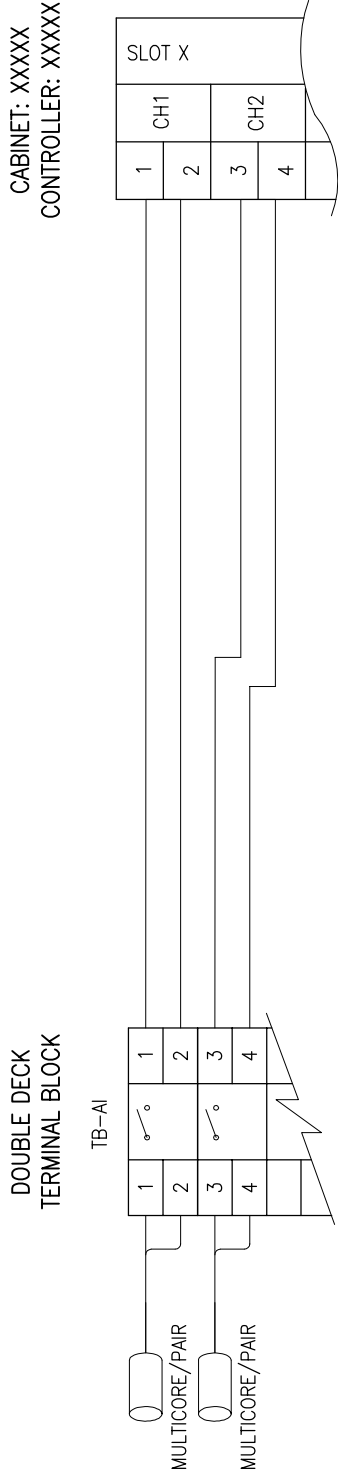

AO NIS SIGNAL

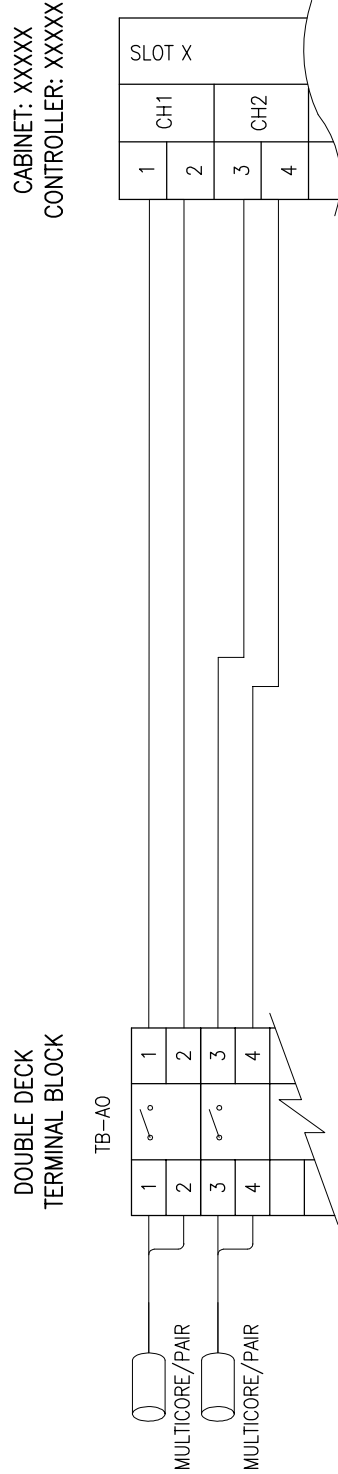

PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)

EMERSON PROJECT NO.: 3258585

PROJECT TITLE:
DCS SERANG PROJECT

SIZE: A3

SCALE: NTS

UNITS: mm (inch)

© 2018

TITLE:
TYPICAL I/O WIRING DIAGRAM
AI NIS SIGNAL, AO NIS SIGNAL

EMERSON DRAWING NO.: 3258585-PSS-PASH-DWG-00001

CUSTOMER DRAWING NO.: -

SHEET NO:

008

REV:

0

BILL OF MATERIALS

ITEM NO.	DESCRIPTION		PART NUMBER	QTY.	MANUFACTURER
01	RIO CABINET (W1000 X H1400 X D400) FRONT ACCESS		NKD-3262869-02	1 SET	GRP INDUSTRIES
02	AC MCB 2POLE (20A)		IK60N C10A	1 PC	SCHNEIDER
03	DC MCB 2POLE (20A)		C60H-DC C20A	1 PC	SCHNEIDER
04	40 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
05	60 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
06	80 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
07	INSTRUMENT GROUND BAR		-	1 LOT	CONTRACTOR
08	SAFETY GROUND BAR		-	1 LOT	CONTRACTOR
09	2-COND THROUGH TERMINAL BLOCK, 10MM SQ		2010-1201	3 PCS	WAGO
10	FUSE DISCONNECT TB WITH FUSE BLOW INDICATOR, 24VDC, 4MM SQ		2004-1611/1000-0541	7 PCS	WAGO
11	2-COND THROUGH TERMINAL BLOCK, 4MM SQ		2004-1201	17 PCS	WAGO
12	DOUBLE DECK DISCONNECT TERMINAL BLOCK, 2.5MM SQ		2002-2671	150 PCS	WAGO
13	END STOPPER		249-117	1 LOT	WAGO
14	FIBER OPTIC PATCH PANEL (BY OTHERS)		TBA	1 PC	TBA
15	DELTAV BULK POWER SUPPLY 100-240 V AC TO 24 V DC, 20A		VE5126	1 PC	EMERSON PROCESS
16	REMOTE INTERFACE UNIT FOR ZONE 2 REMOTE I/O		VE4021	1 PC	EMERSON PROCESS
17	2-WIDE POWER/CONTROLLER CARRIER		VE3051C0	1 PC	EMERSON PROCESS
18	ENHANCED SYSTEM POWER SUPPLY; (DUAL DC/DC) INPUT		VE5009	1 PC	EMERSON PROCESS
19	DISCRETE INPUT CARD: 32 CHANNELS 24 VDC; DRY CONTACT; TERMINATION BLOCK		VE4001S2T2B4	4 PCS	EMERSON PROCESS
20	DISCRETE OUTPUT CARD 32 CHANNELS 24 VDC; HIGH SIDE; I/O TERMINATION BLOCK		VE4002S1T2B5	4 PCS	EMERSON PROCESS
21	RELAY MODULE		2966171	140 PCS	PHOENIX CONTACT
22	8-WIDE I/O INTERFACE CARRIER WITH CARRIER SHIELD BAR		VE3051C0	1 PC	EMERSON PROCESS
23	DUAL SINGLE MODE MEDIA CONVERTER ASSEMBLY		VE6060	1 PC	EMERSON PROCESS
24	AK4 - CABLE SCREEN CONNECTOR		0404017	60PCS	PHOENIX CONTACT
25	DOUBLE DECK FUSE TERMINAL BLOCK WITH INDICATOR, 2.5MM SQ		2002-2611	150 PCS	WAGO
26					
27					
28					



PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(s)

EMERSON PROJECT NO.: 3258585
PROJECT TITLE:
DCS SERANG PROJECT

SCALE: NTS
UNITS: mm (inch)


SIZE: A3
2018

TITLE:
TYPICAL RIO CABINET DIGITAL
BILL OF MATERIAL


EMERSON DRAWING NO.: 3258585-PSS-PASH-DWG-00001
CUSTOMER DRAWING NO.: -

SHEET NO: 011
REV: 0


DI NIS SIGNAL – 2WIRE (NBN4–Proximity Switch)

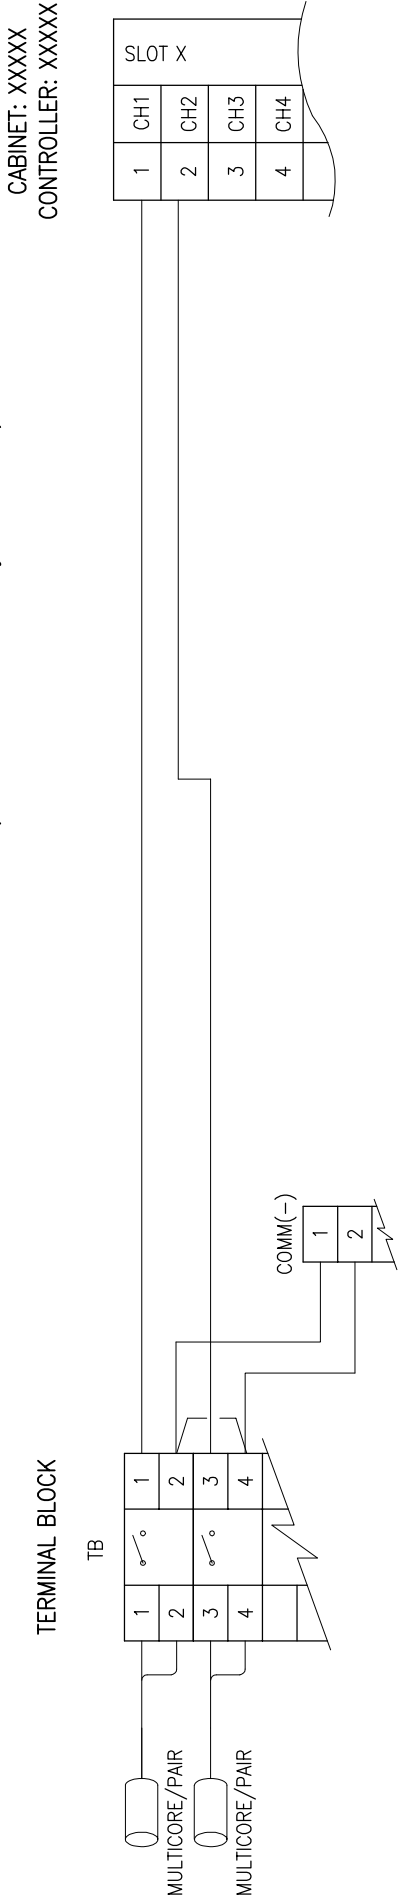

DI NIS SIGNAL WITH RELAY – 2WIRE (NBN3–Proximity Switch)

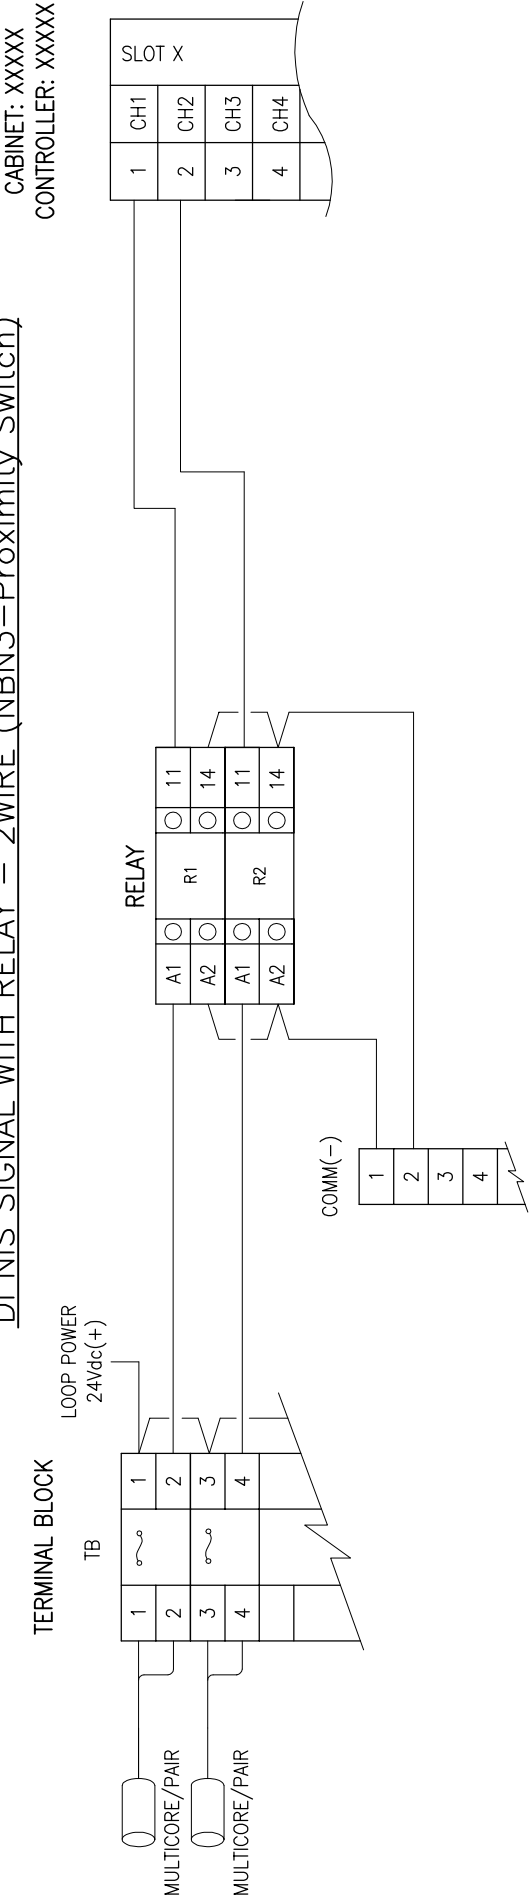

DI NIS SIGNAL WITH RELAY – 3WIRE (Level Switch)

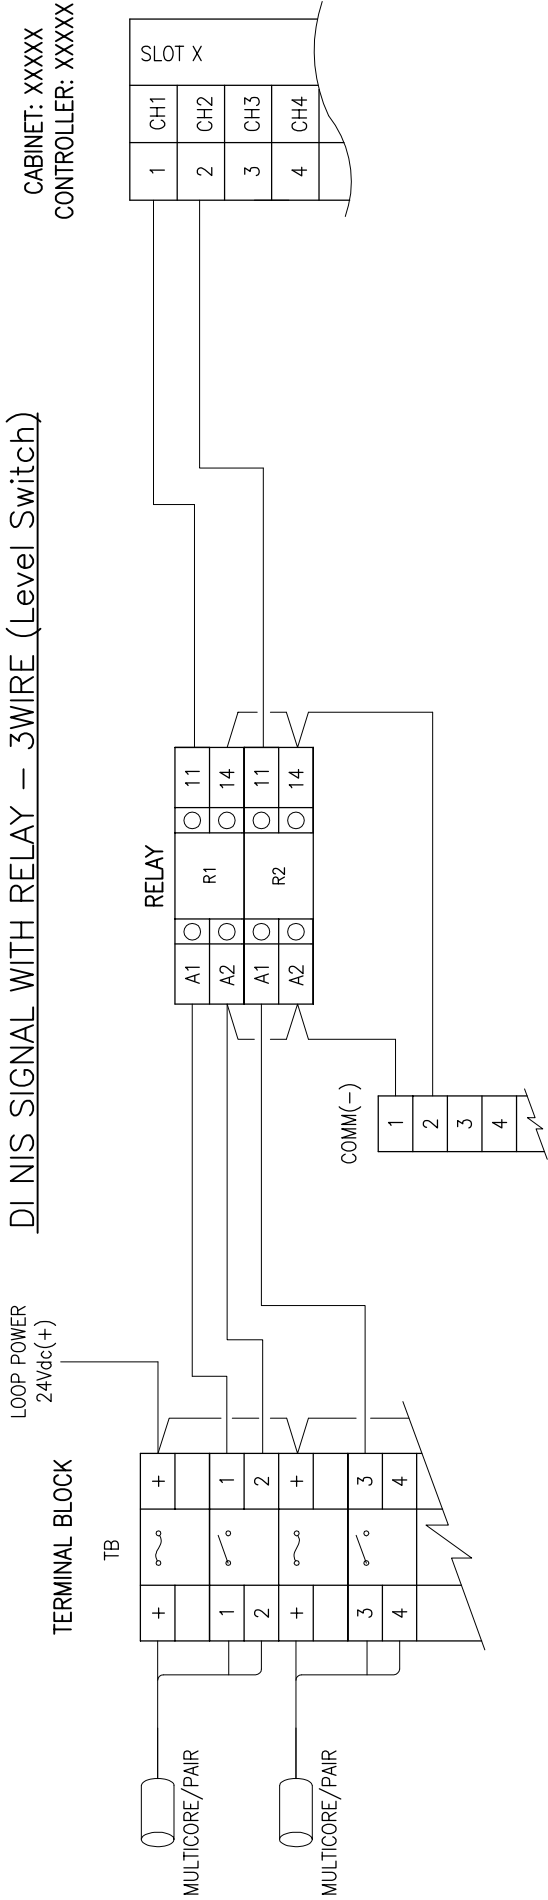

PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)



SCALE: NTS
UNITS: mm (inch)

SIZE: A3
© 2018


EMERSON PROJECT NO.: 3258585
PROJECT TITLE: DCS SERANG PROJECT

TITLE: TYPICAL I/O WIRING DIAGRAM
DI NIS SIGNAL, DO NIS SIGNAL

EMERSON DRAWING NO.: 3258585–PSS–PASH–DWG–00001
CUSTOMER DRAWING NO.: –

SHEET NO: 014
REV: 0

DO NIS SIGNAL – 24Vdc Wet Contact

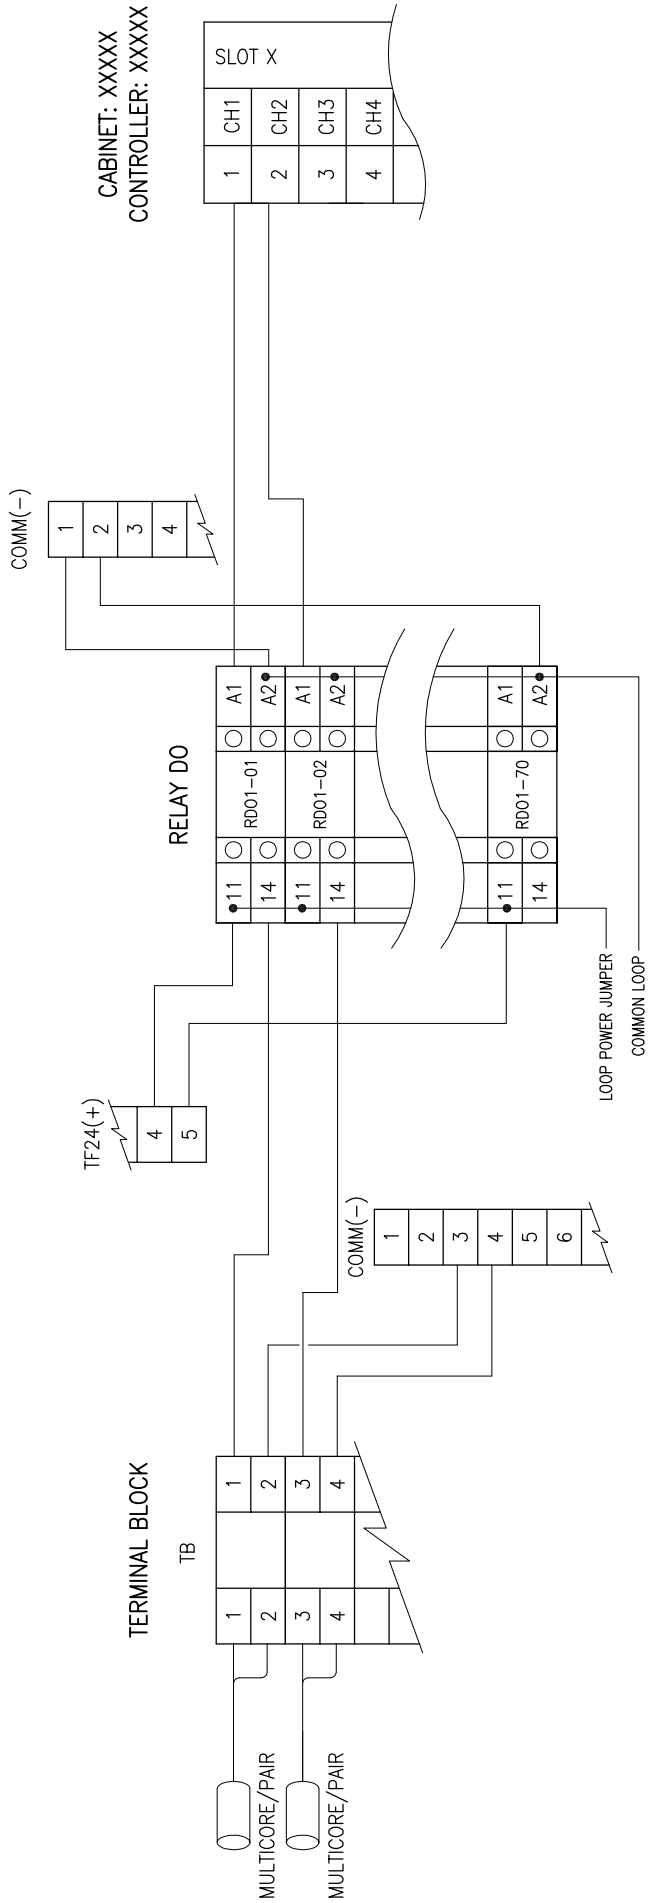

PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(s)

EMERSON PROJECT NO.: **3258585**
PROJECT TITLE:
DCS SERANG PROJECT

SCALE: **NTS** SIZE: **A3**
UNITS: **mm (inch)** © **2018**

TITLE:
TYPICAL I/O WIRING DIAGRAM
DI NIS SIGNAL, DO NIS SIGNAL

EMERSON DRAWING NO.:
3258585-PSS-PASH-DWG-00001

CUSTOMER DRAWING NO.:
-

SHEET NO.:
015

REV.:
0

NOTE: ACTUAL QUANTITY OF I/O CARDS
WILL BE BASED ON ACTUAL I/O SEGREGATION



PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)




SCALE: NTS
UNITS: mm (inch)

EMERSON PROJECT NO.: 3258585
PROJECT TITLE: DCS SERANG PROJECT

TITLE: TYPICAL RIO CABINET ANALOG ZONE 2
(FRONT VIEW, SECTION A-A,
SECTION B-B & BOTTOM VIEW)


EMERSON DRAWING NO.: 3258585-PSS-PASH-DWG-00001
SHEET NO: 017
CUSTOMER DRAWING NO.: -
REV: 0

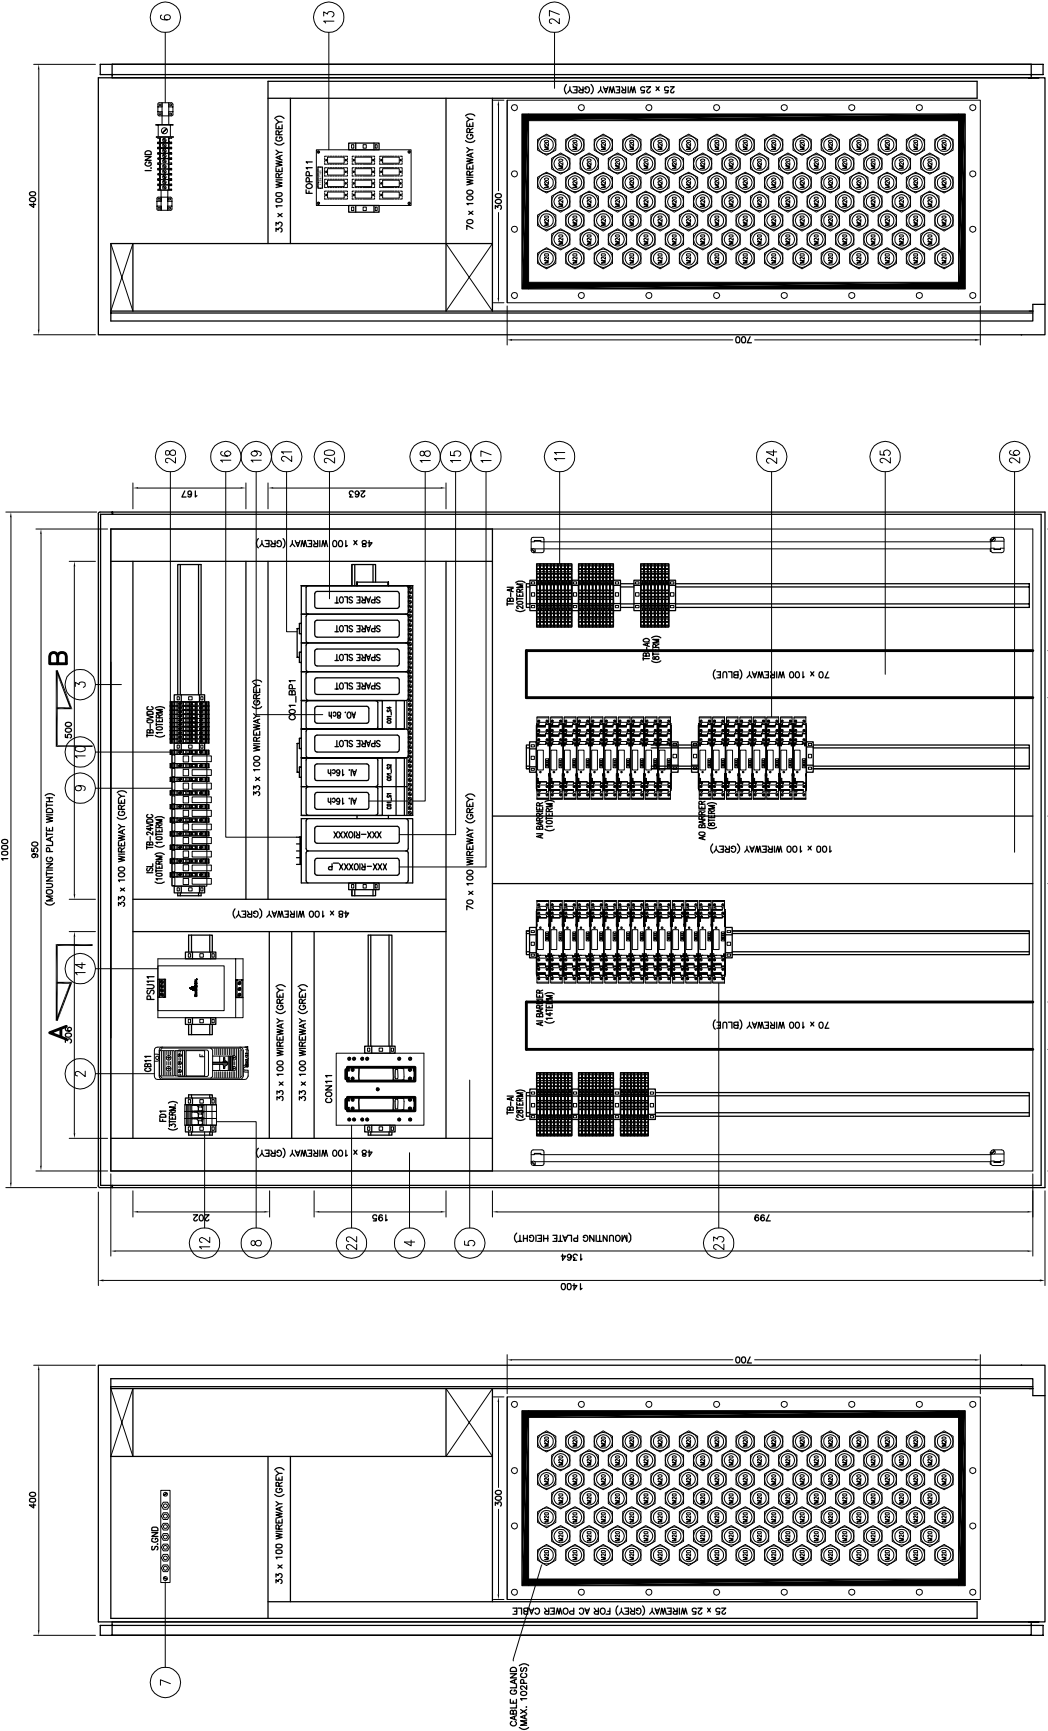

SECTION A-A
RIO CABINET – XXXX

FRONT VIEW
RIO CABINET – XXXX

SECTION B-B
RIO CABINET – XXXX

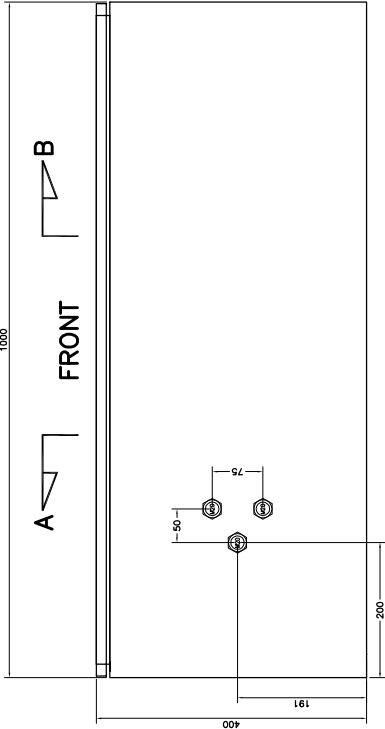

REAR
BOTTOM VIEW
RIO CABINET – XXXX

BILL OF MATERIALS

ITEM NO.	DESCRIPTION		PART NUMBER	QTY.	MANUFACTURER
01	RIO CABINET (W1000 X H1400 X D400) FRONT ACCESS		–	1 SET	TBA
02	AC MCB 2POLE (10A)		–	1 PC	TBA
03	33 X 100 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR
04	48 X 100 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR
05	70 X 100 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR
06	INSTRUMENT GROUND BAR		–	1 LOT	CONTRACTOR
07	SAFETY GROUND BAR		–	1 LOT	CONTRACTOR
08	2–COND THROUGH TERMINAL BLOCK, 10MM SQ		2010–1201	3 PCS	WAGO
09	ISOLATING TERMINAL		8082/1–1–01	10 PCS	STAHL
10	FUSE MODULAR TERMINAL BLOCK – UK 10–DREHSI–EX (5X20)		3073953	10 PCS	PHOENIX CONTACT
11	DOUBLE DECK DISCONNECT TERMINAL BLOCK, 2.5MM SQ		2002–2671	56 PCS	WAGO
12	END STOPPER		249–117	1 LOT	WAGO
13	FIBER OPTIC PATCH PANEL (BY OTHERS)		TBA	1 PC	TBA
14	DELTA V BULK POWER SUPPLY 100–240 V AC TO 24 V DC, 20A		VE5126	1 PC	EMERSON PROCESS
15	REMOTE INTERFACE UNIT FOR ZONE 2 REMOTE I/O		VE4021	1 PC	EMERSON PROCESS
16	2–WIDE POWER/CONTROLLER CARRIER		VE3051C0	1 PC	EMERSON PROCESS
17	ENHANCED SYSTEM POWER SUPPLY; (DUAL DC/DC) INPUT		VE5009	1 PC	EMERSON PROCESS
18	ANALOG INPUT CARD; 16 CHANNELS; 4–20 MA; HART; I/O TERMINATION BLOCK		VE4003S2B6	2 PCS	EMERSON PROCESS
19	ANALOG OUTPUT, 8 CHANNELS 4–20 MA, HART, STANDARD I/O TERMINATION BLOCK		VE4005S2B1	1 PC	EMERSON PROCESS
20	CARRIER BLANK CAP		VE6101	5 PCS	EMERSON PROCESS
21	8–WIDE I/O INTERFACE CARRIER WITH CARRIER SHIELD BAR		VE3051C0	1 PC	EMERSON PROCESS
22	DUAL SINGLE MODE MEDIA CONVERTER ASSEMBLY		VE6060	1 PC	EMERSON PROCESS
23	SMART TRANSMITTER POWER SUPPLY (AI BARRIER)		KFD2–STC5–EX2	24 PCS	PEPPERL+FUCHS
24	SMART CURRENT DRIVER (AO BARRIER)		KFD2–SCD2–EX1.LK	8 PCS	PEPPERL+FUCHS
25	70 X 100 mm PVC WIREWAY (BLUE)		–	1 LOT	CONTRACTOR
26	100 X 100 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR
27	25 X 25 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR
28	2–COND THROUGH TERMINAL BLOCK, 4MM SQ		2004–1201	10 PCS	WAGO



PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)



EMERSON PROJECT NO.: 3258585
PROJECT TITLE:
DCS SERANG PROJECT


SCALE: NTS
UNITS: mm (inch)

SIZE: A3
2018



TITLE:
TYPICAL RIO CABINET ANALOG ZONE 2
BILL OF MATERIAL

EMERSON DRAWING NO.: 3258585–PSS–PASH–DWG–00001
CUSTOMER DRAWING NO.: –

SHEET NO: 018
REV: 0


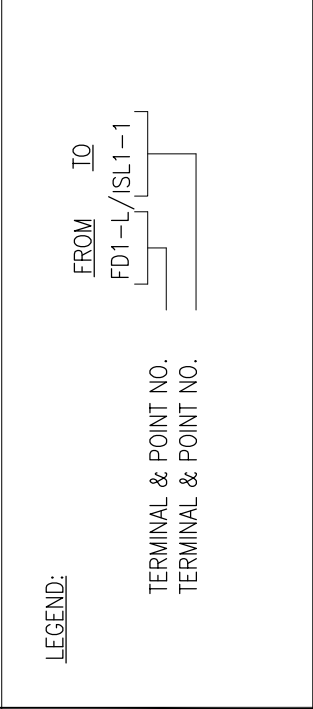


THIS DRAWING IS THE PROPERTY OF EMERSON PROCESS MANAGEMENT. INFORMATION AND KNOW HOW HEREIN ARE CONFIDENTIAL AND MAY NOT BE USED, REPRODUCED OR REVEALED TO OTHERS EXCEPT IN ACCORDANCE WITH CONTRACT OR OTHER WRITTEN CONSENT OF EMERSON PROCESS MANAGEMENT. ANY PERMITTED REPRODUCTION IN WHOLE OR IN PART INCLUDING SHOP DRAWINGS MUST BEAR OR REFER TO THIS LEGEND.

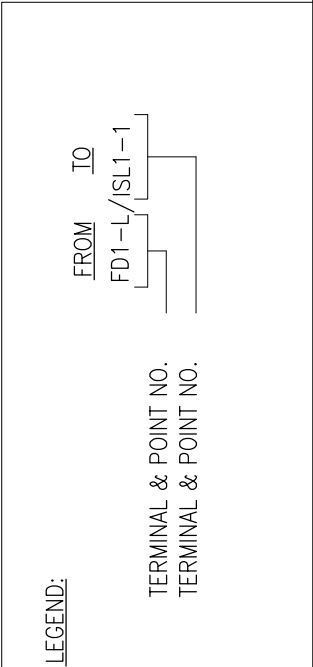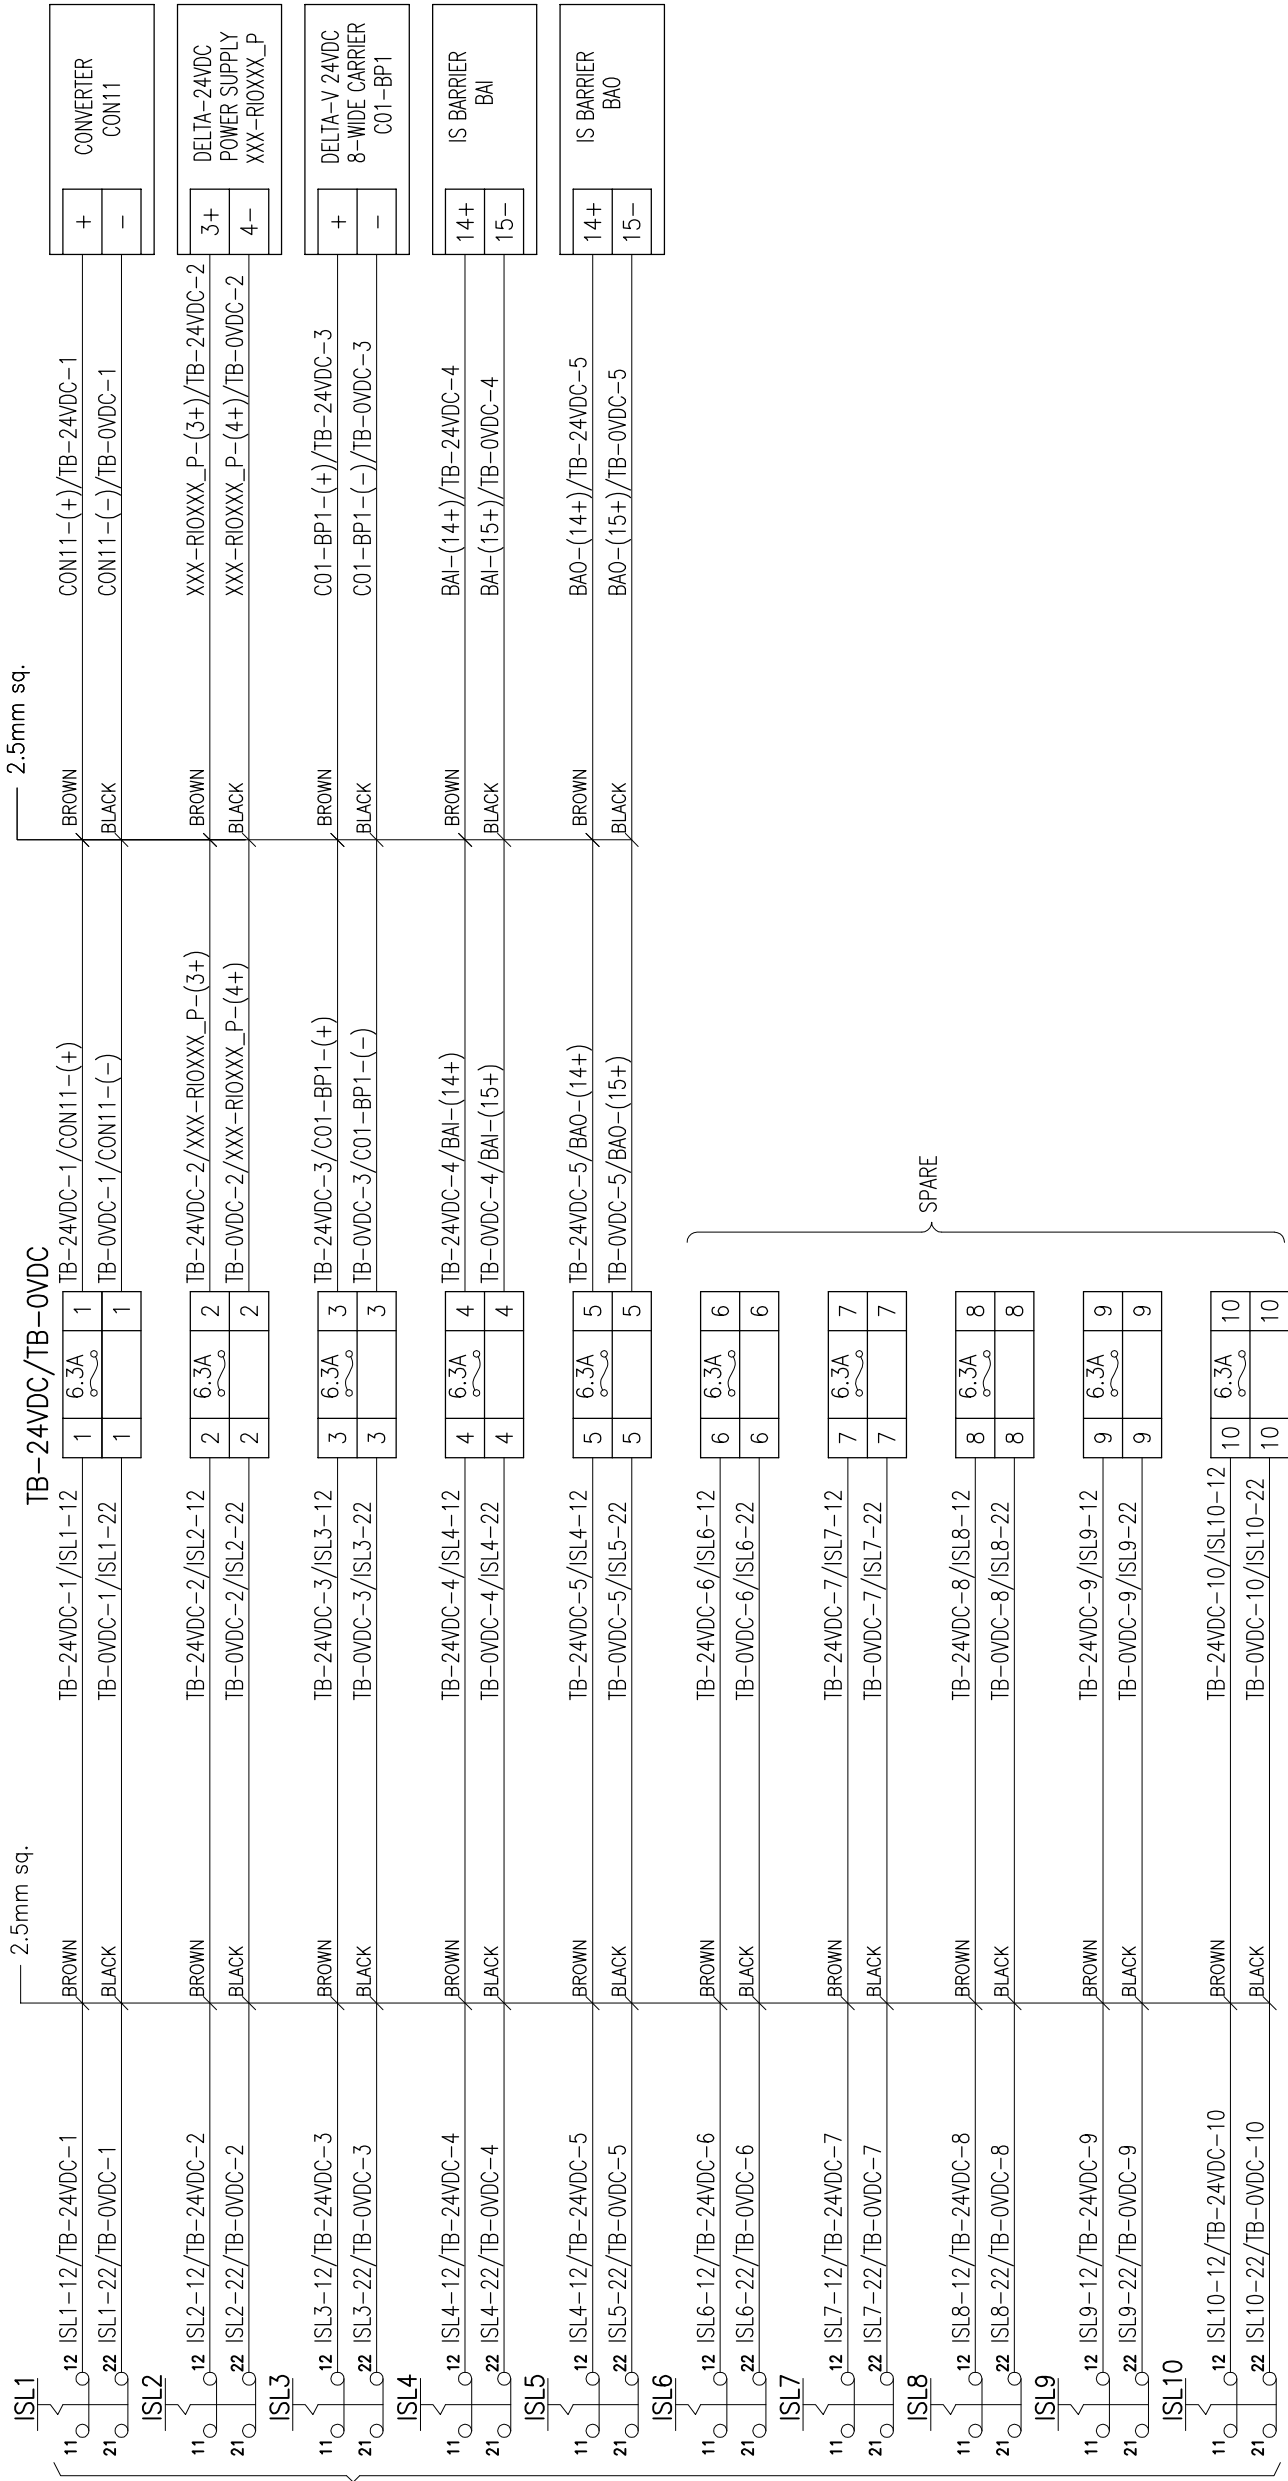

	PERMIT STAMP AND PROFESSIONAL STAMP AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)	 EMERSON.	SCALE:	NTS mm (inch)	SIZE: A3	EMERSON PROJECT NO.: 3258585 PROJECT TITLE: DCS SERANG PROJECT	TITLE: TYPICAL RIO CABINET ANALOG ZONE 2 24VDC POWER DISTRIBUTION DIAGRAM	EMERSON DRAWING NO.: 3258585-PSS-PASH-DWG-00001	SHEET NO.: 020
			UNITS:	2018	REV.: 0				

AI IS SIGNAL

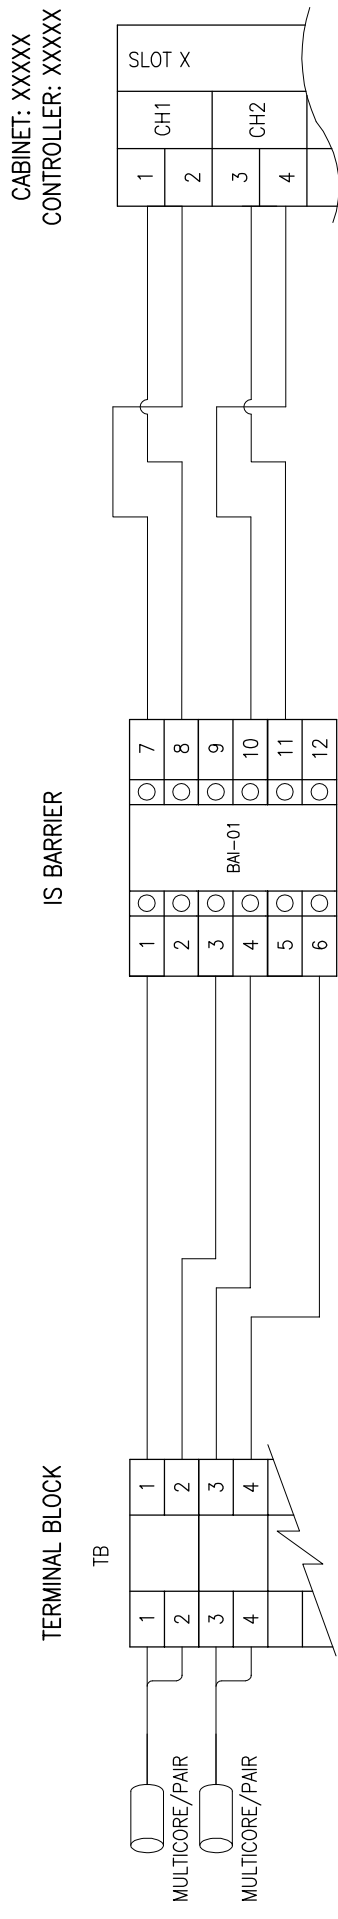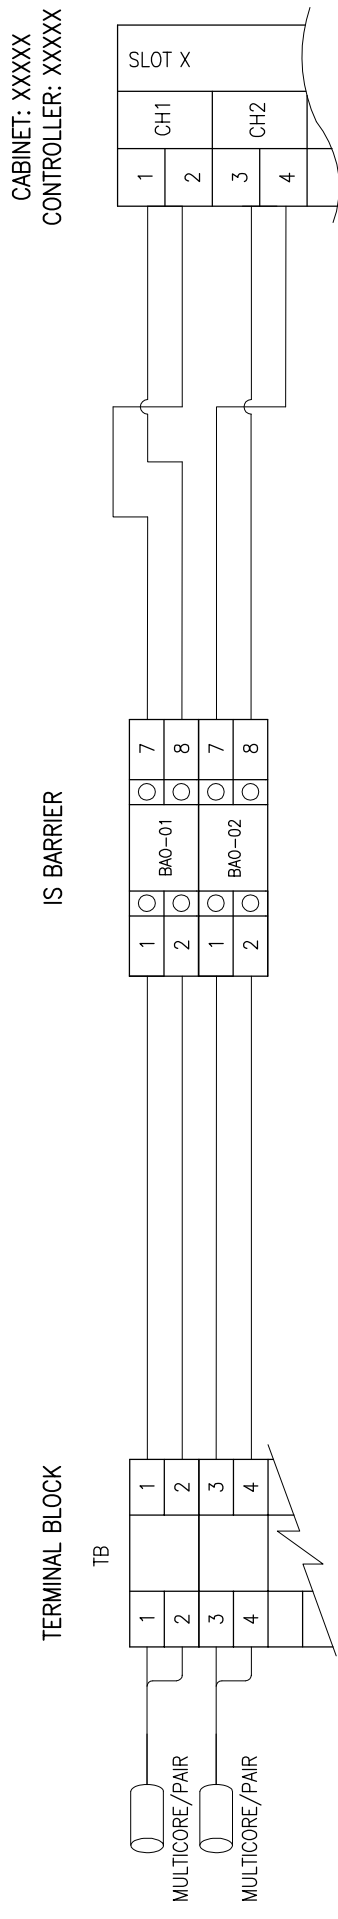AO IS SIGNAL

PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)

EMERSON PROJECT NO.: 3258585

PROJECT TITLE:

PROJECT TITLE
DCS SERANG PROJECT

TITLE:

TYPICAL I/O WIRING DIAGRAM

AI IS SIGNAL, AO IS SIGNAL

EMERSON DRAWING NO.:

EMERSON DRAWING NO.:
3258585-PSS-PASH-DWG-00001

CUSTOMER DRAWING NO.:


1

SHEET NO:


021

REV.:


C




THIS DRAWING IS THE PROPERTY OF EMERSON PROCESS MANAGEMENT. INFORMATION AND KNOW-HOW HEREIN ARE CONFIDENTIAL AND MAY NOT BE USED, REPRODUCED OR REVEALED TO OTHERS EXCEPT IN ACCORDANCE WITH CONTRACT OR OTHER WRITTEN CONSENT OF EMERSON PROCESS MANAGEMENT. ANY PERMITTED REPRODUCTION IN WHOLE OR IN PART, INCLUDING SHOP DRAWINGS MUST BEAR OR REFER TO THIS LEGEND.

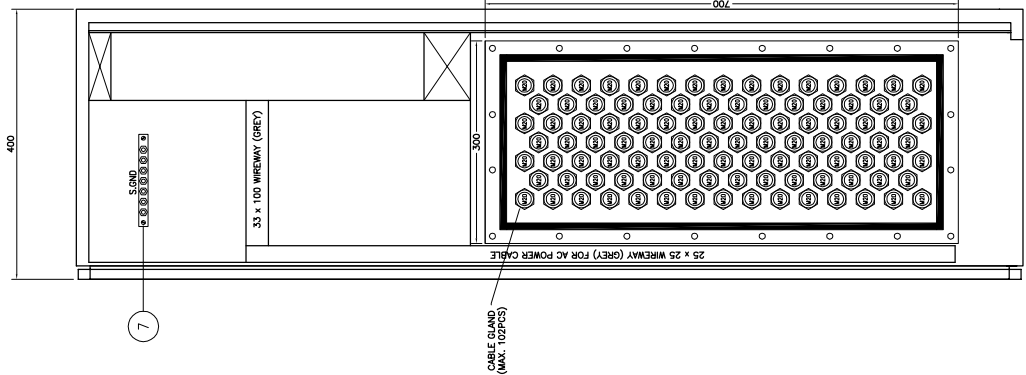


SECTION A-A
RIO CABINET – XXXX

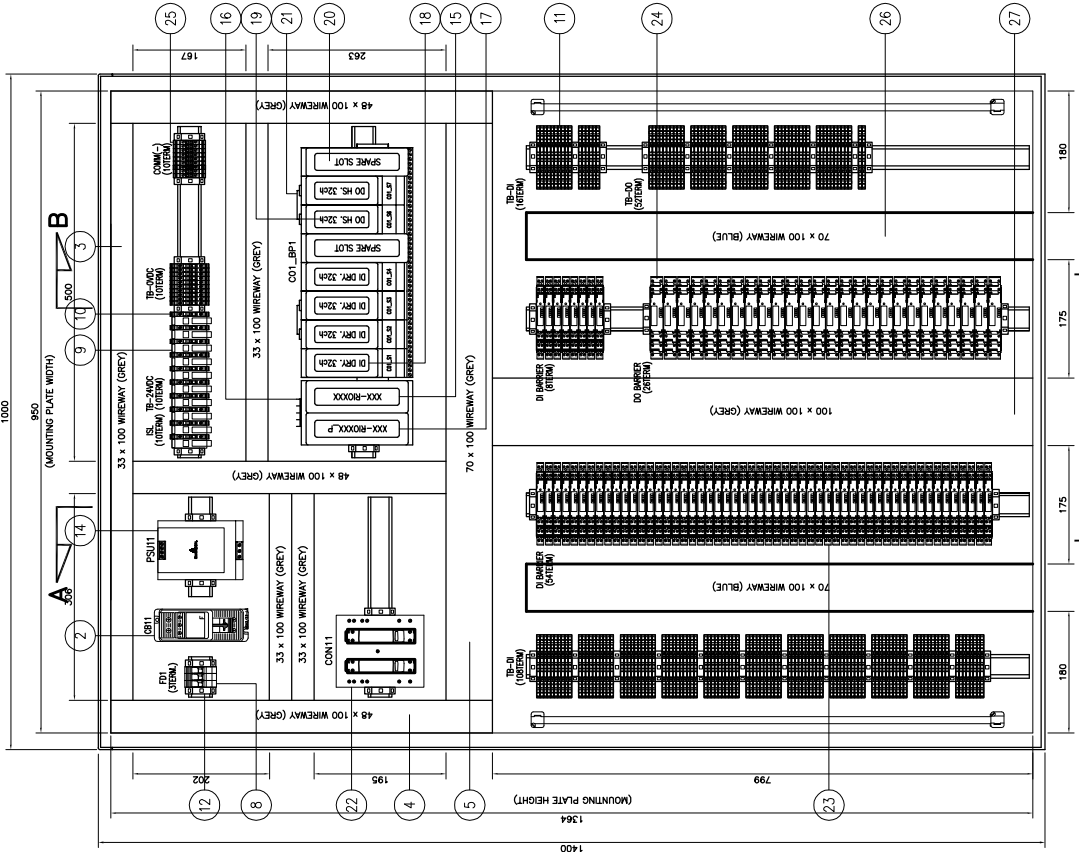

FRONT VIEW
RIO CABINET – XXXX

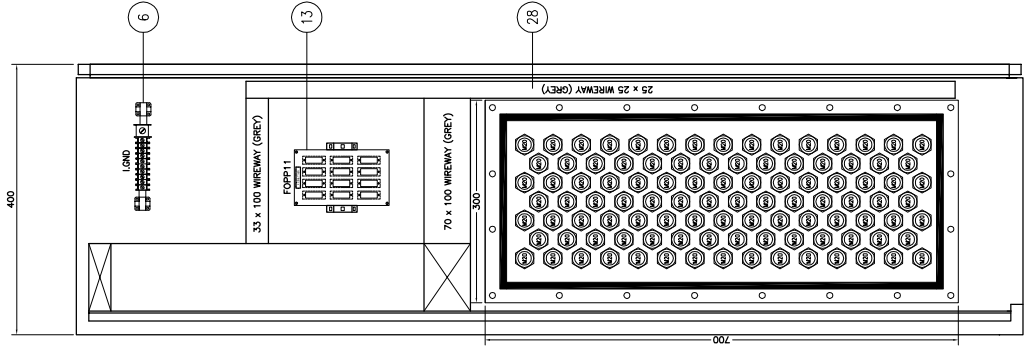

SECTION B-B
RIO CABINET – XXXX

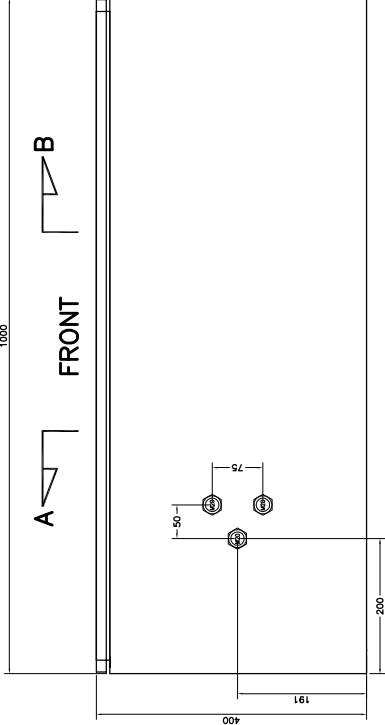

FRONT
RIO CABINET – XXXX

REAR
RIO CABINET – XXXX

NOTE: ACTUAL QUANTITY OF I/O CARDS, RELAY & TERMINAL BLOCKS
WILL BE BASED ON ACTUAL I/O SEGREGATION



PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)

EMERSON PROJECT NO.: 3258585
PROJECT TITLE:
DCS SERANG PROJECT

SCALE: NTS
SIZE: A3
UNITS: mm (inch)
2018

TITLE:
TYPICAL RIO CABINET DIGITAL ZONE 2
(FRONT VIEW, SECTION A-A,
SECTION B-B & BOTTOM VIEW)

EMERSON DRAWING NO.: 3258585-PSS-PASH-DWG-00001

CUSTOMER DRAWING NO.: -

SHEET NO: 023

REV: 0

BILL OF MATERIALS

ITEM NO.	DESCRIPTION		PART NUMBER	QTY.	MANUFACTURER
01	RIO CABINET (W1000 X H1400 X D400) FRONT ACCESS		–	1 SET	TBA
02	AC MCB 2POLE (10A)		–	1 PC	TBA
03	33 X 100 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR
04	48 X 100 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR
05	70 X 100 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR
06	INSTRUMENT GROUND BAR		–	1 LOT	CONTRACTOR
07	SAFETY GROUND BAR		–	1 LOT	CONTRACTOR
08	2–COND THROUGH TERMINAL BLOCK, 10MM SQ		2010–1201	3 PCS	WAGO
09	ISOLATING TERMINAL		8082/1–1–01	10 PCS	STAHL
10	FUSE MODULAR TERMINAL BLOCK – UK 10–DREHSI–EX (5X20)		3073953	10 PCS	PHOENIX CONTACT
11	DOUBLE DECK DISCONNECT TERMINAL BLOCK, 2.5MM SQ		2002–2671	176 PCS	WAGO
12	END STOPPER		249–117	1 LOT	WAGO
13	FIBER OPTIC PATCH PANEL (BY OTHERS)		TBA	1 PC	TBA
14	DELTAV BULK POWER SUPPLY 100–240 V AC TO 24 V DC, 20A		VE5126	1 PC	EMERSON PROCESS
15	REMOTE INTERFACE UNIT FOR ZONE 2 REMOTE I/O		VE4021	1 PC	EMERSON PROCESS
16	2–WIDE POWER/CONTROLLER CARRIER		VE3051C0	1 PC	EMERSON PROCESS
17	ENHANCED SYSTEM POWER SUPPLY; (DUAL DC/DC) INPUT		VE5009	1 PC	EMERSON PROCESS
18	DISCRETE INPUT CARD: 32 CHANNELS 24 VDC; DRY CONTACT; TERMINATION BLOCK		VE4001S2T2B4	4 PCS	EMERSON PROCESS
19	DISCRETE OUTPUT CARD 32 CHANNELS 24 VDC; HIGH SIDE; I/O TERMINATION BLOCK		VE4002S1T2B5	2 PCS	EMERSON PROCESS
20	CARRIER BLANK CAP		VE6101	2 PCS	EMERSON PROCESS
21	8–WIDE I/O INTERFACE CARRIER WITH CARRIER SHIELD BAR		VE3051C0	1 PC	EMERSON PROCESS
22	DUAL SINGLE MODE MEDIA CONVERTER ASSEMBLY		VE6060	1 PC	EMERSON PROCESS
23	SWITCH AMPLIFIER (DI BARRIER)		KCD2–SR–EX2	62 PCS	PEPPERL+FUCHS
24	SOLENOID DRIVER (DO BARRIER)		KFD0–SD2–EX2.1045	26 PCS	PEPPERL+FUCHS
25	2–COND THROUGH TERMINAL BLOCK, 4MM SQ		2004–1201	20 PCS	WAGO
26	70 X 100 mm PVC WIREWAY (BLUE)		–	1 LOT	CONTRACTOR
27	100 X 100 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR
28	25 X 25 mm PVC WIREWAY (GREY)		–	1 LOT	CONTRACTOR



PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)



SCALE: NTS
UNITS: mm (inch)

SIZE: A3
2018


EMERSON PROJECT NO.: 3258585
PROJECT TITLE: DCS SERANG PROJECT

TITLE: TYPICAL RIO CABINET DIGITAL ZONE 2
BILL OF MATERIAL


EMERSON DRAWING NO.: 3258585–PSS–PASH–DWG–00001

SHEET NO: 024

REV: 0

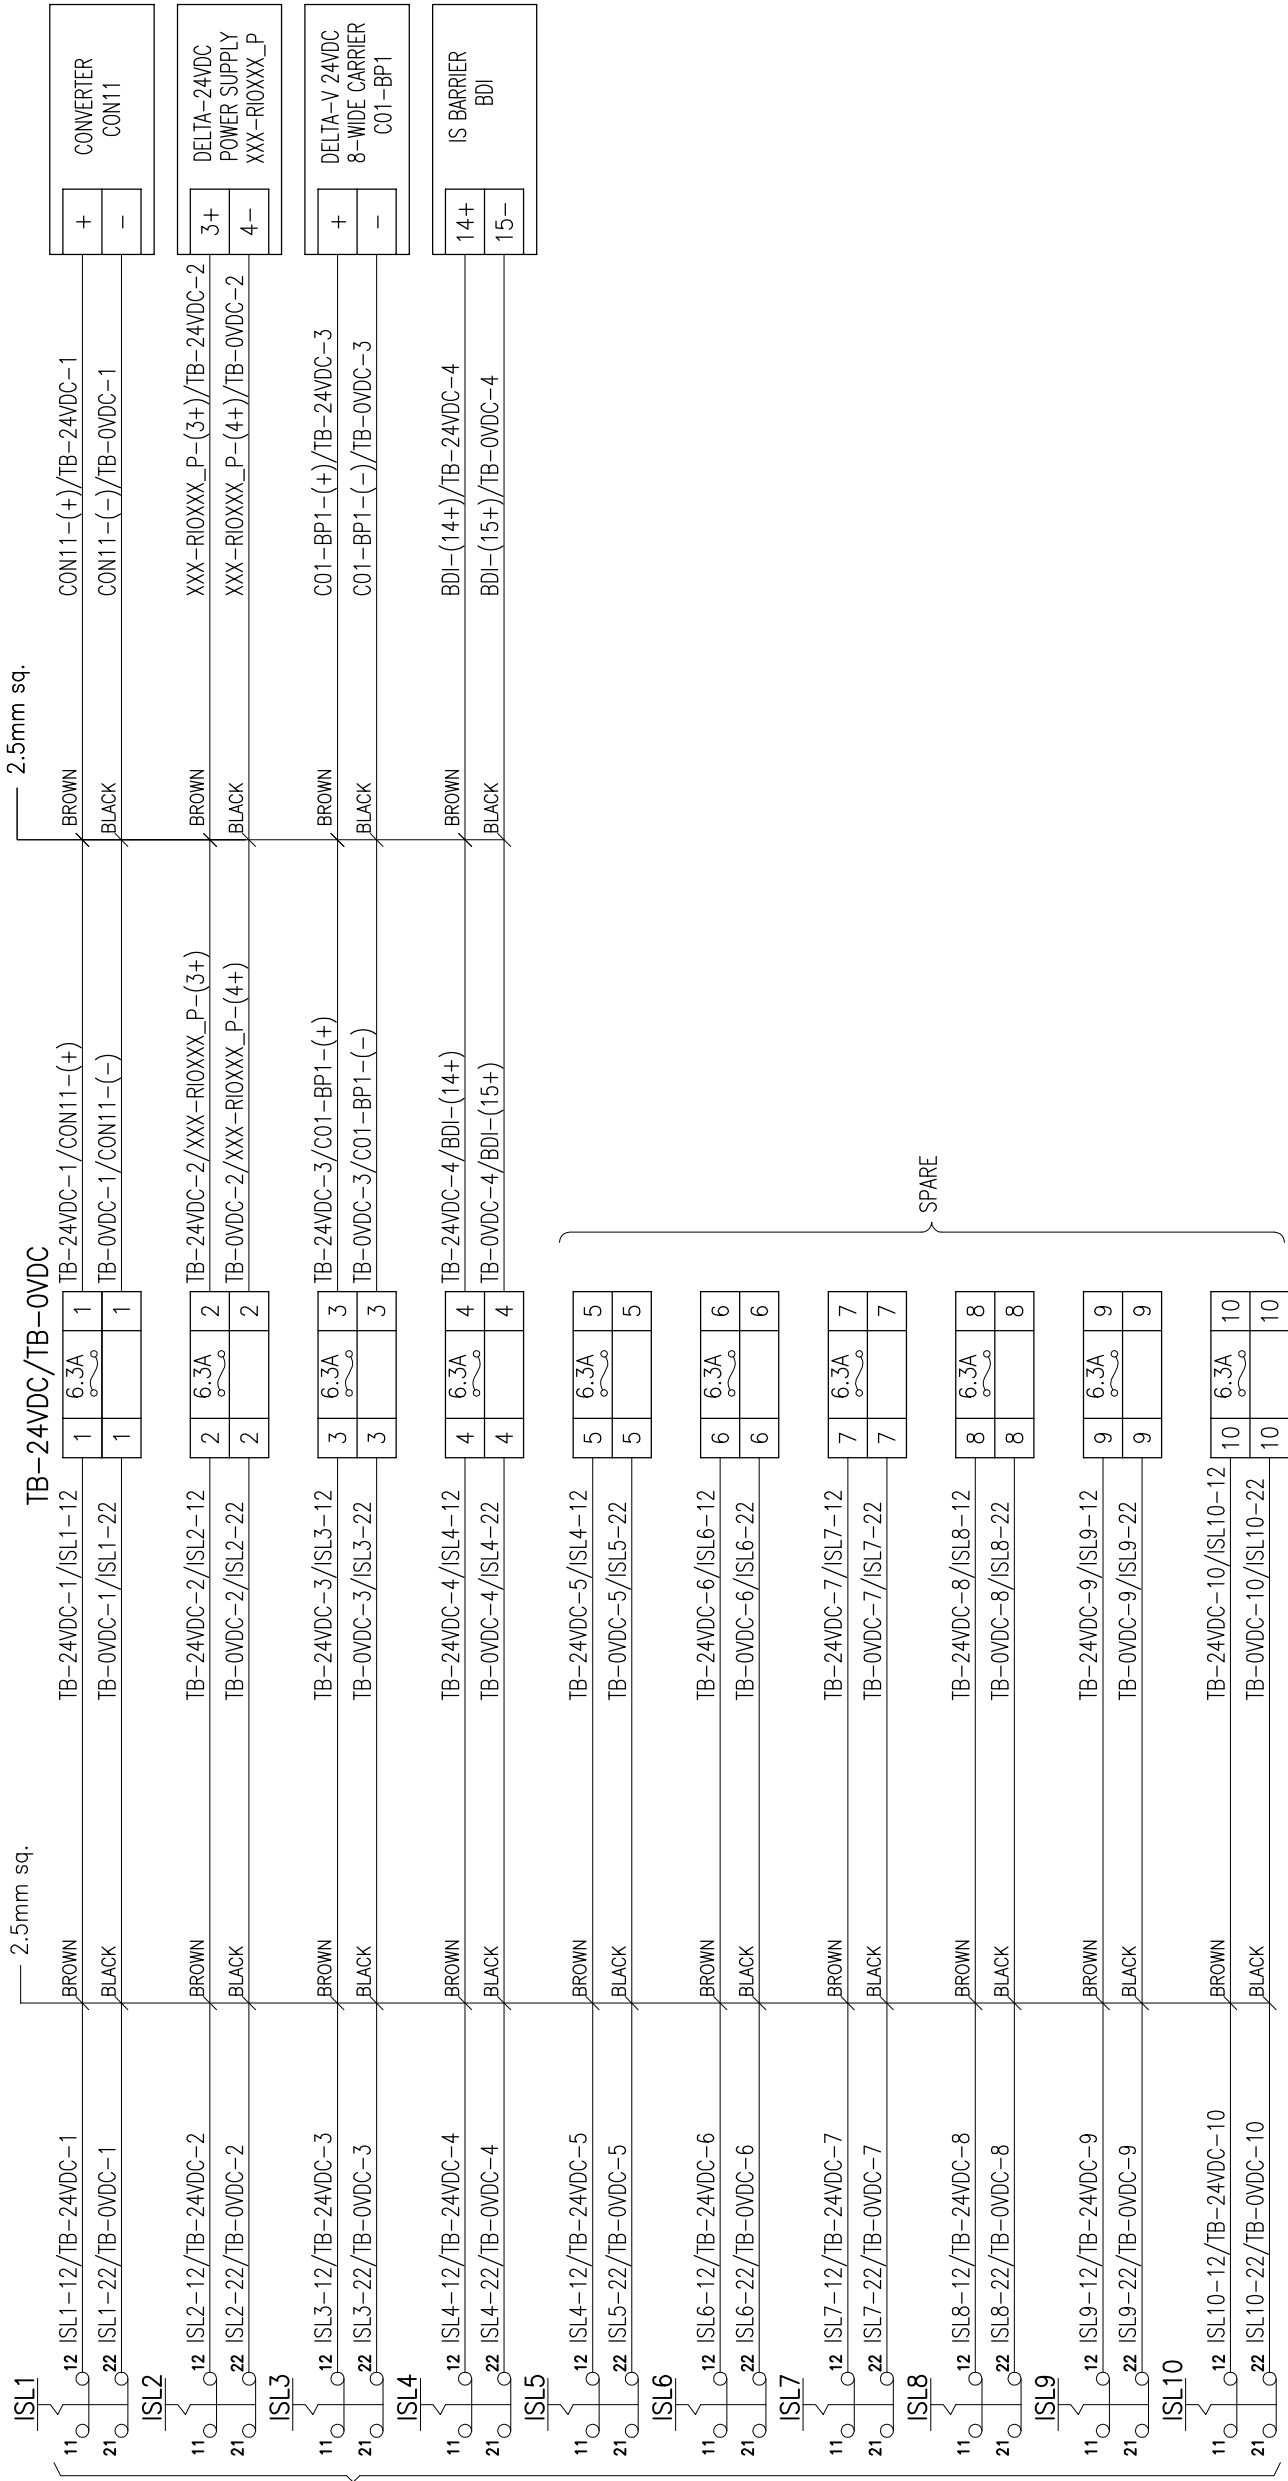

LEGEND:

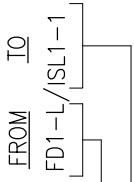

	TERMINAL & POINT NO.	TERMINAL & POINT NO.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49		
50		
51		
52		
53		
54		
55		
56		
57		
58		
59		
60		
61		
62		
63		
64		
65		
66		
67		
68		
69		
70		
71		
72		
73		
74		
75		
76		
77		
78		
79		
80		
81		
82		
83		
84		
85		
86		
87		
88		
89		
90		
91		
92		
93		
94		
95		
96		
97		
98		
99		
100		



PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)

EMERSON PROJECT NO.: 3258585



PROJECT TITLE:
DCS SERANG PROJECT


TITLE:
TYPICAL RIO CABINET DIGITAL ZONE 2
24VDC POWER DISTRIBUTION
DIAGRAM

EMERSON DRAWING NO.:
3258585-PSS-PASH-DWG-00001

SHEET NO:
026

THIS DRAWING IS THE PROPERTY OF EMERSON PROCESS MANAGEMENT. INFORMATION AND KNOW HOW HEREIN ARE CONFIDENTIAL AND MAY NOT BE USED, REPRODUCED OR REVEALED TO OTHERS EXCEPT IN ACCORDANCE WITH CONTRACT OR OTHER WRITTEN CONSENT OF EMERSON PROCESS MANAGEMENT. ANY PERMITTED REPRODUCTION IN WHOLE OR IN PART, INCLUDING SHOP DRAWINGS MUST BEAR OR REFER TO THIS LEGEND.

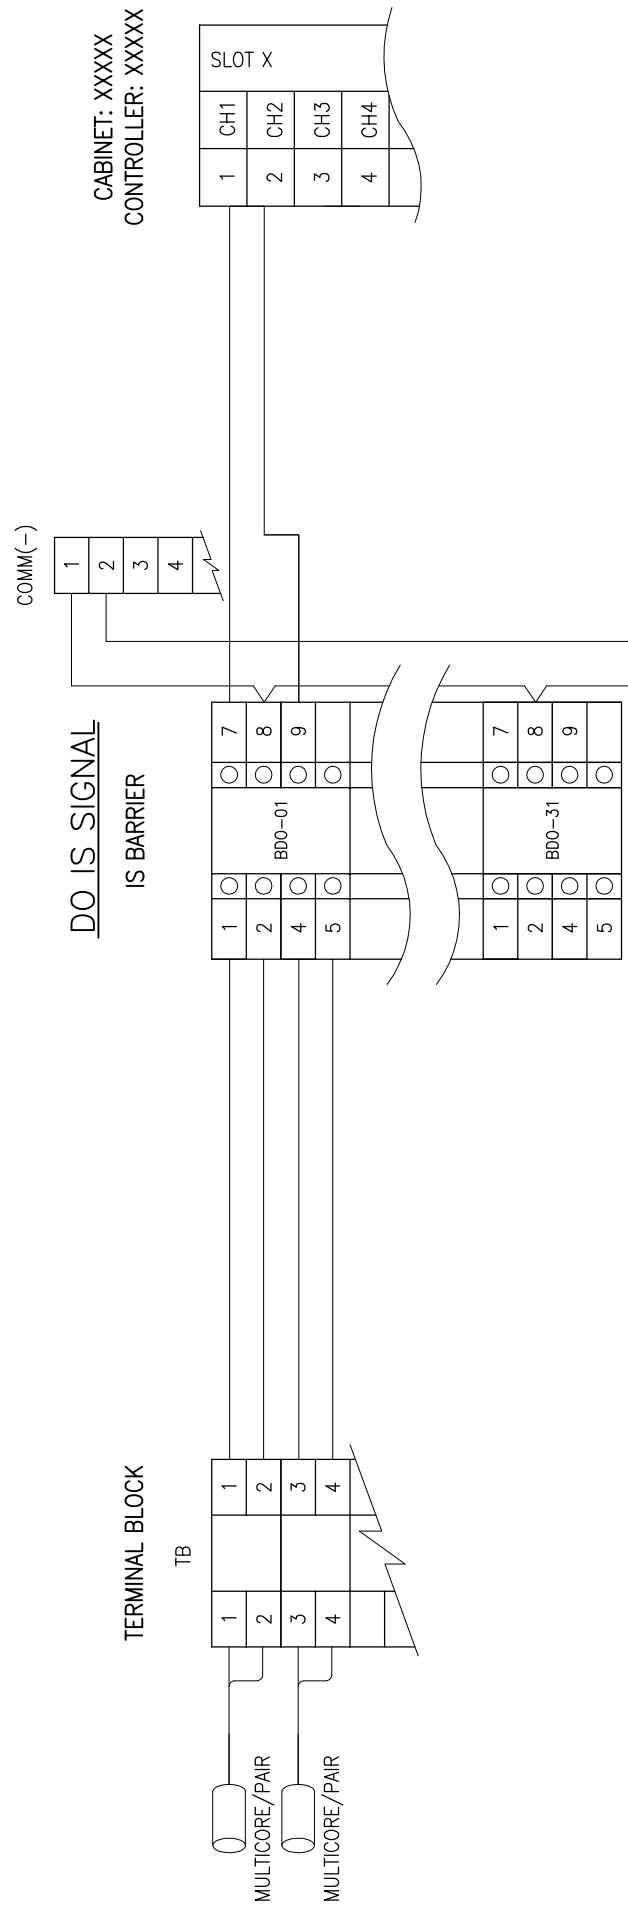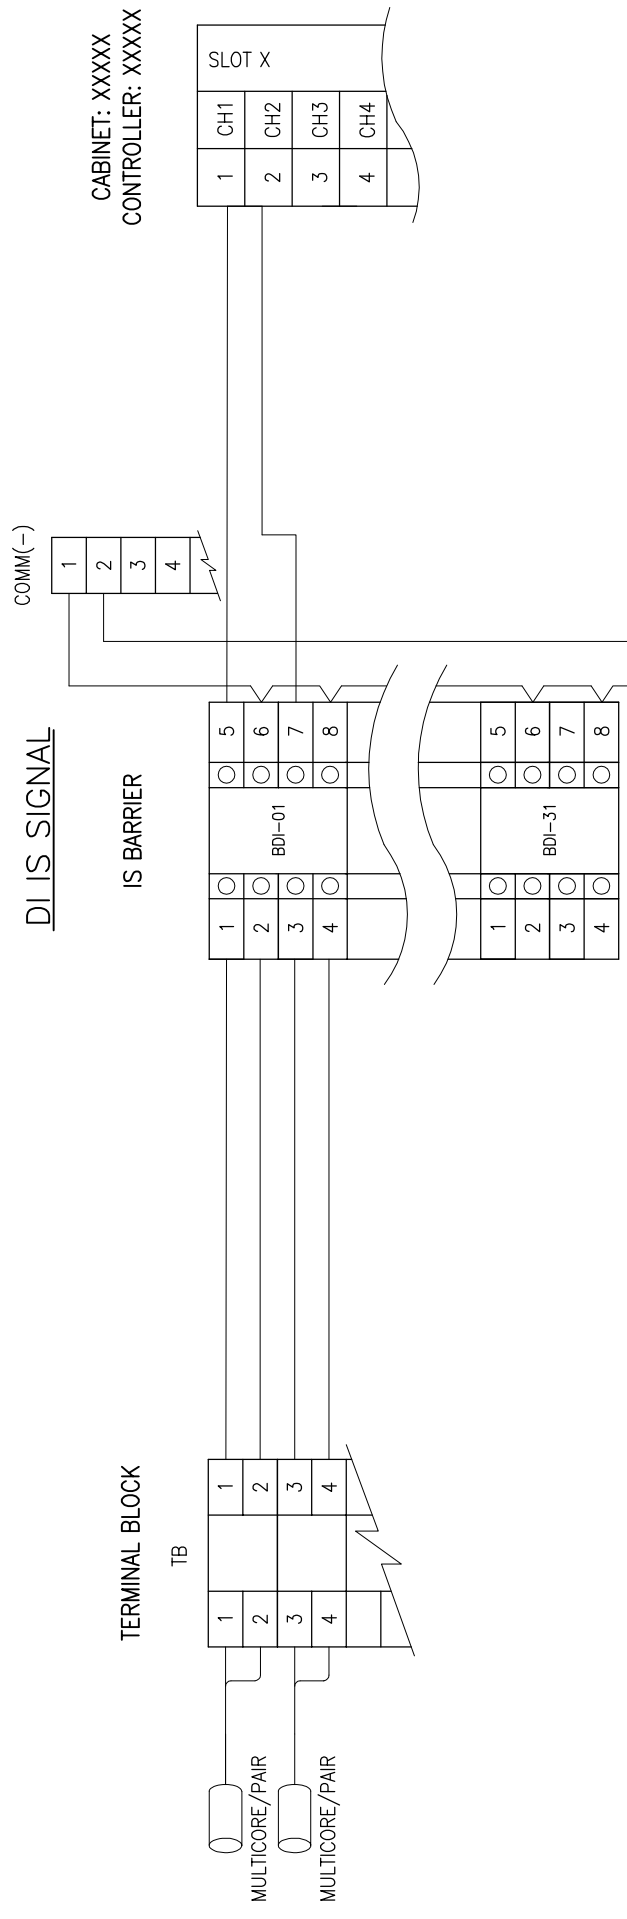

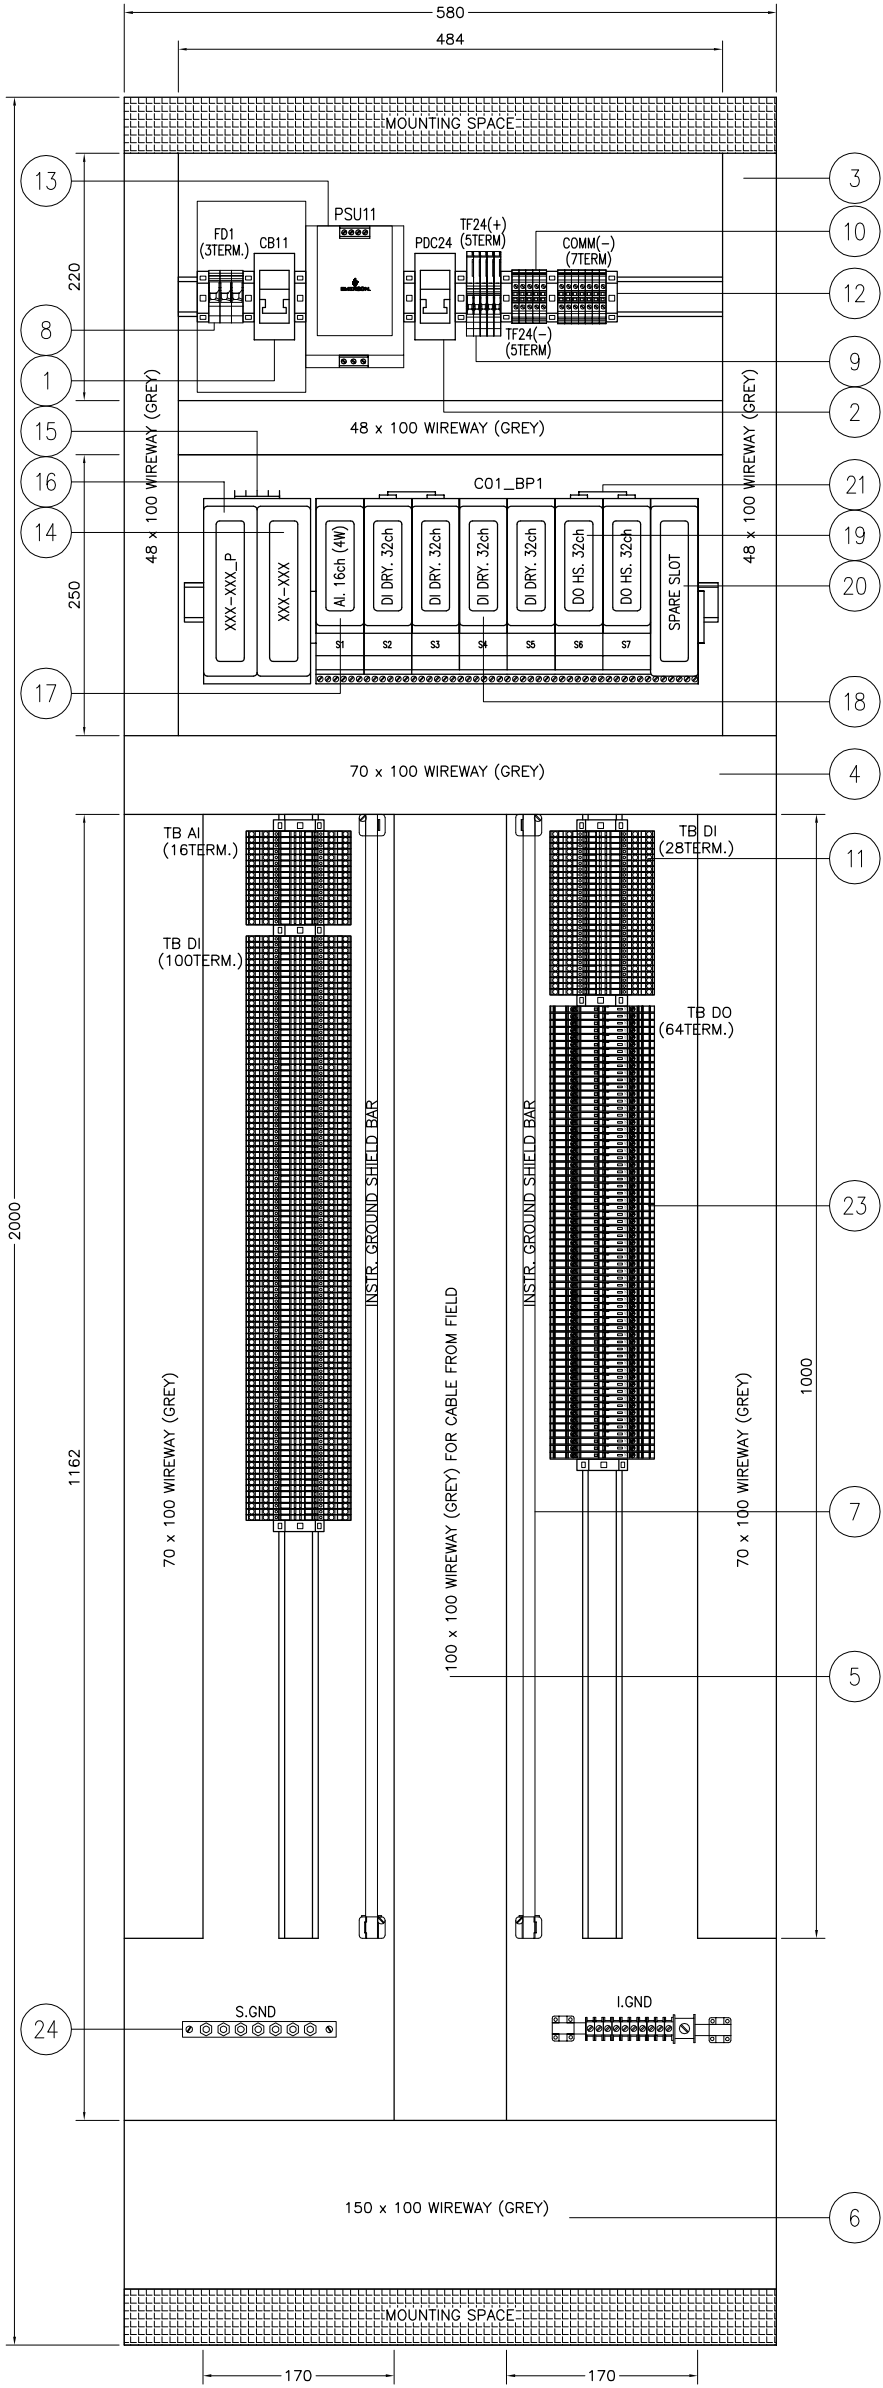

FRONT VIEW
RIO MCC – XXXX



PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(S)



SCALE: NTS
UNITS: mm (inch)

SIZE: A3
© 2018

EMERSON PROJECT NO.: 3258585
PROJECT TITLE: DCS SERANG PROJECT

TITLE: TYPICAL RIO FOR MCC
(FRONT VIEW)

EMERSON DRAWING NO.: 3258585-PSS-PASH-DWG-00001
CUSTOMER DRAWING NO.: -

SHEET NO: 028
REV: 0

BILL OF MATERIALS

ITEM NO.	DESCRIPTION		PART NUMBER	QTY.	MANUFACTURER
01	AC MCB 2POLE (10A)		IK60N C10A	1 PC	SCHNEIDER
02	DC MCB 2POLE (20A)		C60H-DC C20A	1 PC	SCHNEIDER
03	48 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
04	70 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
05	100 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
06	150 X 100 mm PVC WIREWAY (GREY)		-	1 LOT	CONTRACTOR
07	INSTRUMENT GROUND BAR		-	1 LOT	CONTRACTOR
08	2-COND THROUGH TERMINAL BLOCK, 10MM SQ		2010-1201	3 PCS	WAGO
09	FUSE DISCONNECT TB WITH FUSE BLOW INDICATOR, 24VDC, 4MM SQ		2004-1611/1000-0541	5 PCS	WAGO
10	2-COND THROUGH TERMINAL BLOCK, 4MM SQ		2004-1201	12 PCS	WAGO
11	DOUBLE DECK DISCONNECT TERMINAL BLOCK, 2.5MM SQ		2002-2671	144 PCS	WAGO
12	END STOPPER		249-117	14 PCS	WAGO
13	DELTA V BULK POWER SUPPLY 100-240 V AC TO 24 V DC, 20A		VE5126	1 PC	EMERSON PROCESS
14	REMOTE INTERFACE UNIT FOR ZONE 2 REMOTE I/O		VE4021	1 PC	EMERSON PROCESS
15	2-WIDE POWER/CONTROLLER CARRIER		VE3051C0	1 PC	EMERSON PROCESS
16	ENHANCED SYSTEM POWER SUPPLY; (DUAL DC/DC) INPUT		VE5009	1 PC	EMERSON PROCESS
17	ANALOG INPUT CARD; 16 CHANNELS; 4-20 MA; HART; 4-WIRE; I/O TERMINATION BLOCK		VE4003S2B7	1 PC	EMERSON PROCESS
18	DISCRETE INPUT CARD; 32 CHANNELS 24 VDC; DRY CONTACT; TERMINATION BLOCK		VE4001S2T2B4	4 PCS	EMERSON PROCESS
19	DISCRETE OUTPUT CARD 32 CHANNELS 24 VDC; HIGH SIDE; I/O TERMINATION BLOCK		VE4002S1T2B5	2 PCS	EMERSON PROCESS
20	CARRIER BLANK CAP		VE6101	1 PC	EMERSON PROCESS
21	8-WIDE I/O INTERFACE CARRIER WITH CARRIER SHIELD BAR		VE3051C0	1 PC	EMERSON PROCESS
22	AK4 - CABLE SCREEN CONNECTOR		0404017	1 LOT	PHOENIX CONTACT
23	DOUBLE DECK FUSE TERMINAL BLOCK WITH INDICATOR, 2.5MM SQ		2002-2611	64 PCS	WAGO
24	SAFETY GROUND BAR		-	1 LOT	CONTRACTOR
25					
26					
27					
28					





PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(s)

EMERSON PROJECT NO.: 3258585
PROJECT TITLE:
DCS SERANG PROJECT

SCALE: NTS
UNITS: mm (inch)


SIZE: A3
2018

TITLE:
TYPICAL RIO FOR MCC
BILL OF MATERIAL


EMERSON DRAWING NO.: 3258585-PSS-PASH-DWG-00001
CUSTOMER DRAWING NO.: -

SHEET NO: 029
REV: 0


ANALOG INPUT CARD; 16 CHANNELS; 4–20 MA
AI NIS SIGNAL

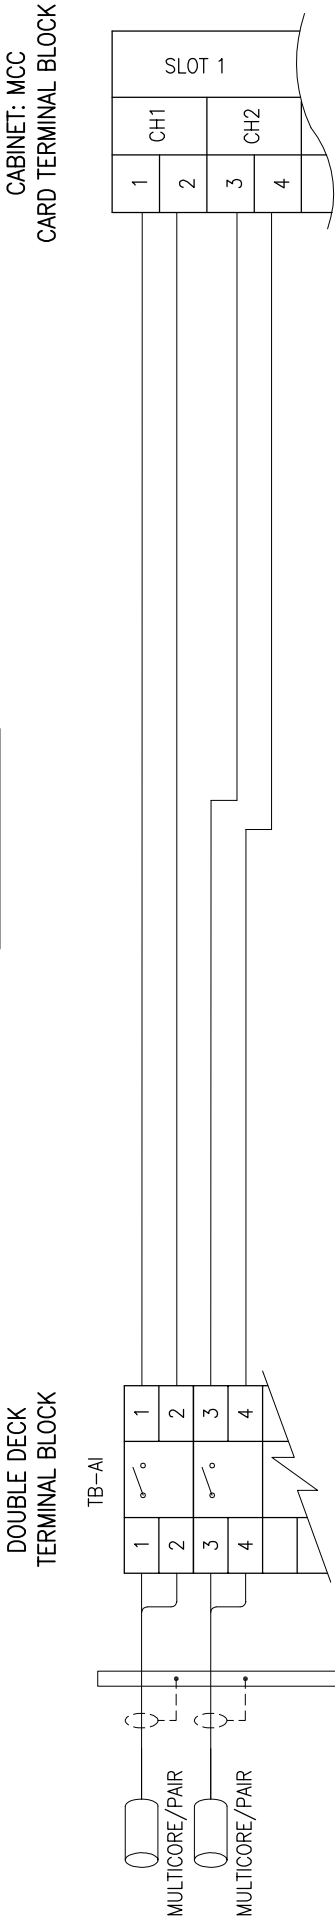

DISCRETE INPUT CARD: 32 CHANNELS 24 VDC; DRY CONTACT
DI NIS SIGNAL – 2WIRE

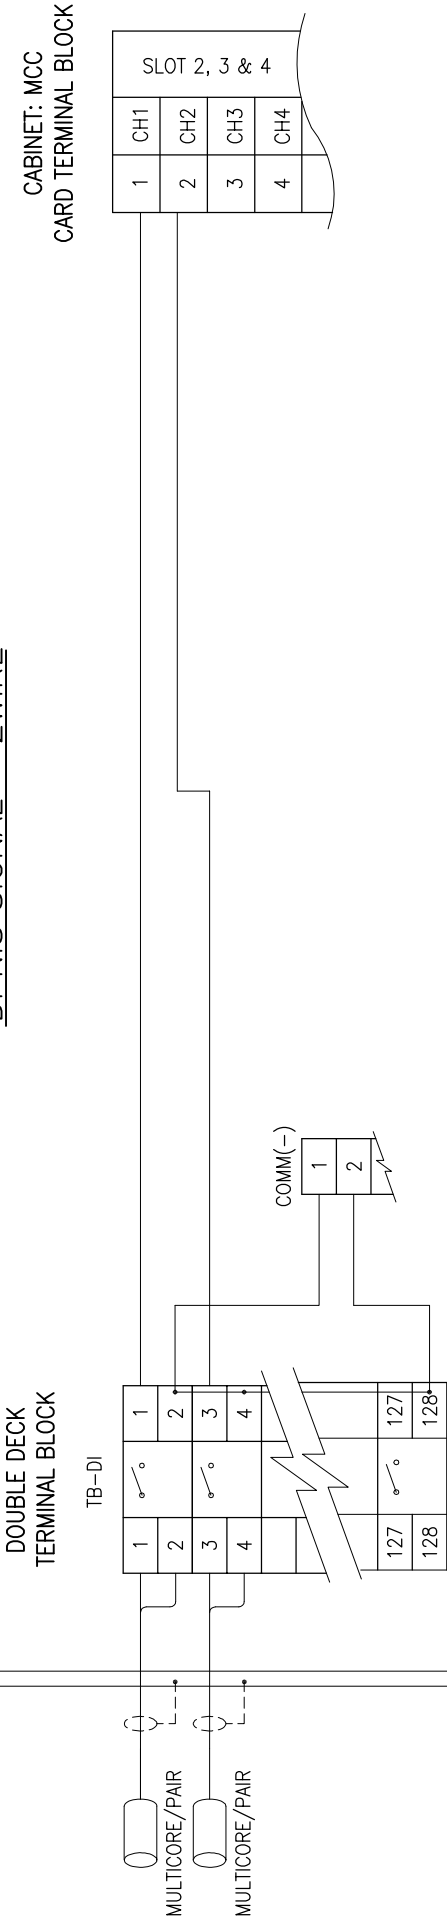

DISCRETE OUTPUT CARD 32 CHANNELS 24 VDC; HIGH SIDE
DO NIS SIGNAL – 24Vdc Wet Contact

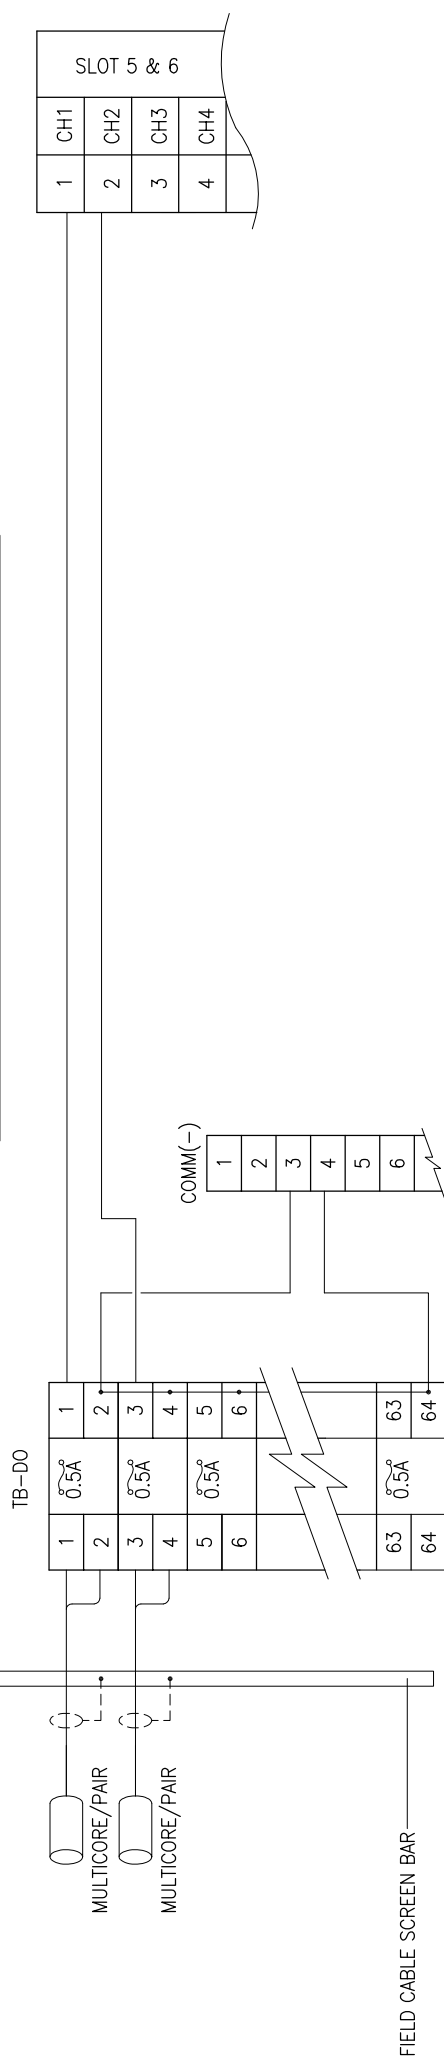

PERMIT STAMP AND PROFESSIONAL STAMP
AFFIXED ABOVE SHALL APPLY ONLY TO REV(s)

EMERSON PROJECT NO.: 3258585

PROJECT TITLE:

DCS SERANG PROJECT

SCALE:

NTS

A3

EMERSON DRAWING NO.:

TITLE:

TYPICAL I/O WIRING DIAGRAM
AI NIS SIGNAL, DI NIS SIGNAL,
DO NIS SIGNAL

EMERSON DRAWING NO.:

3258585–PSS–PASH–DWG–00001

SHEET NO.:

032

REV.:

0